


WP-739 CROSS
by OTB.

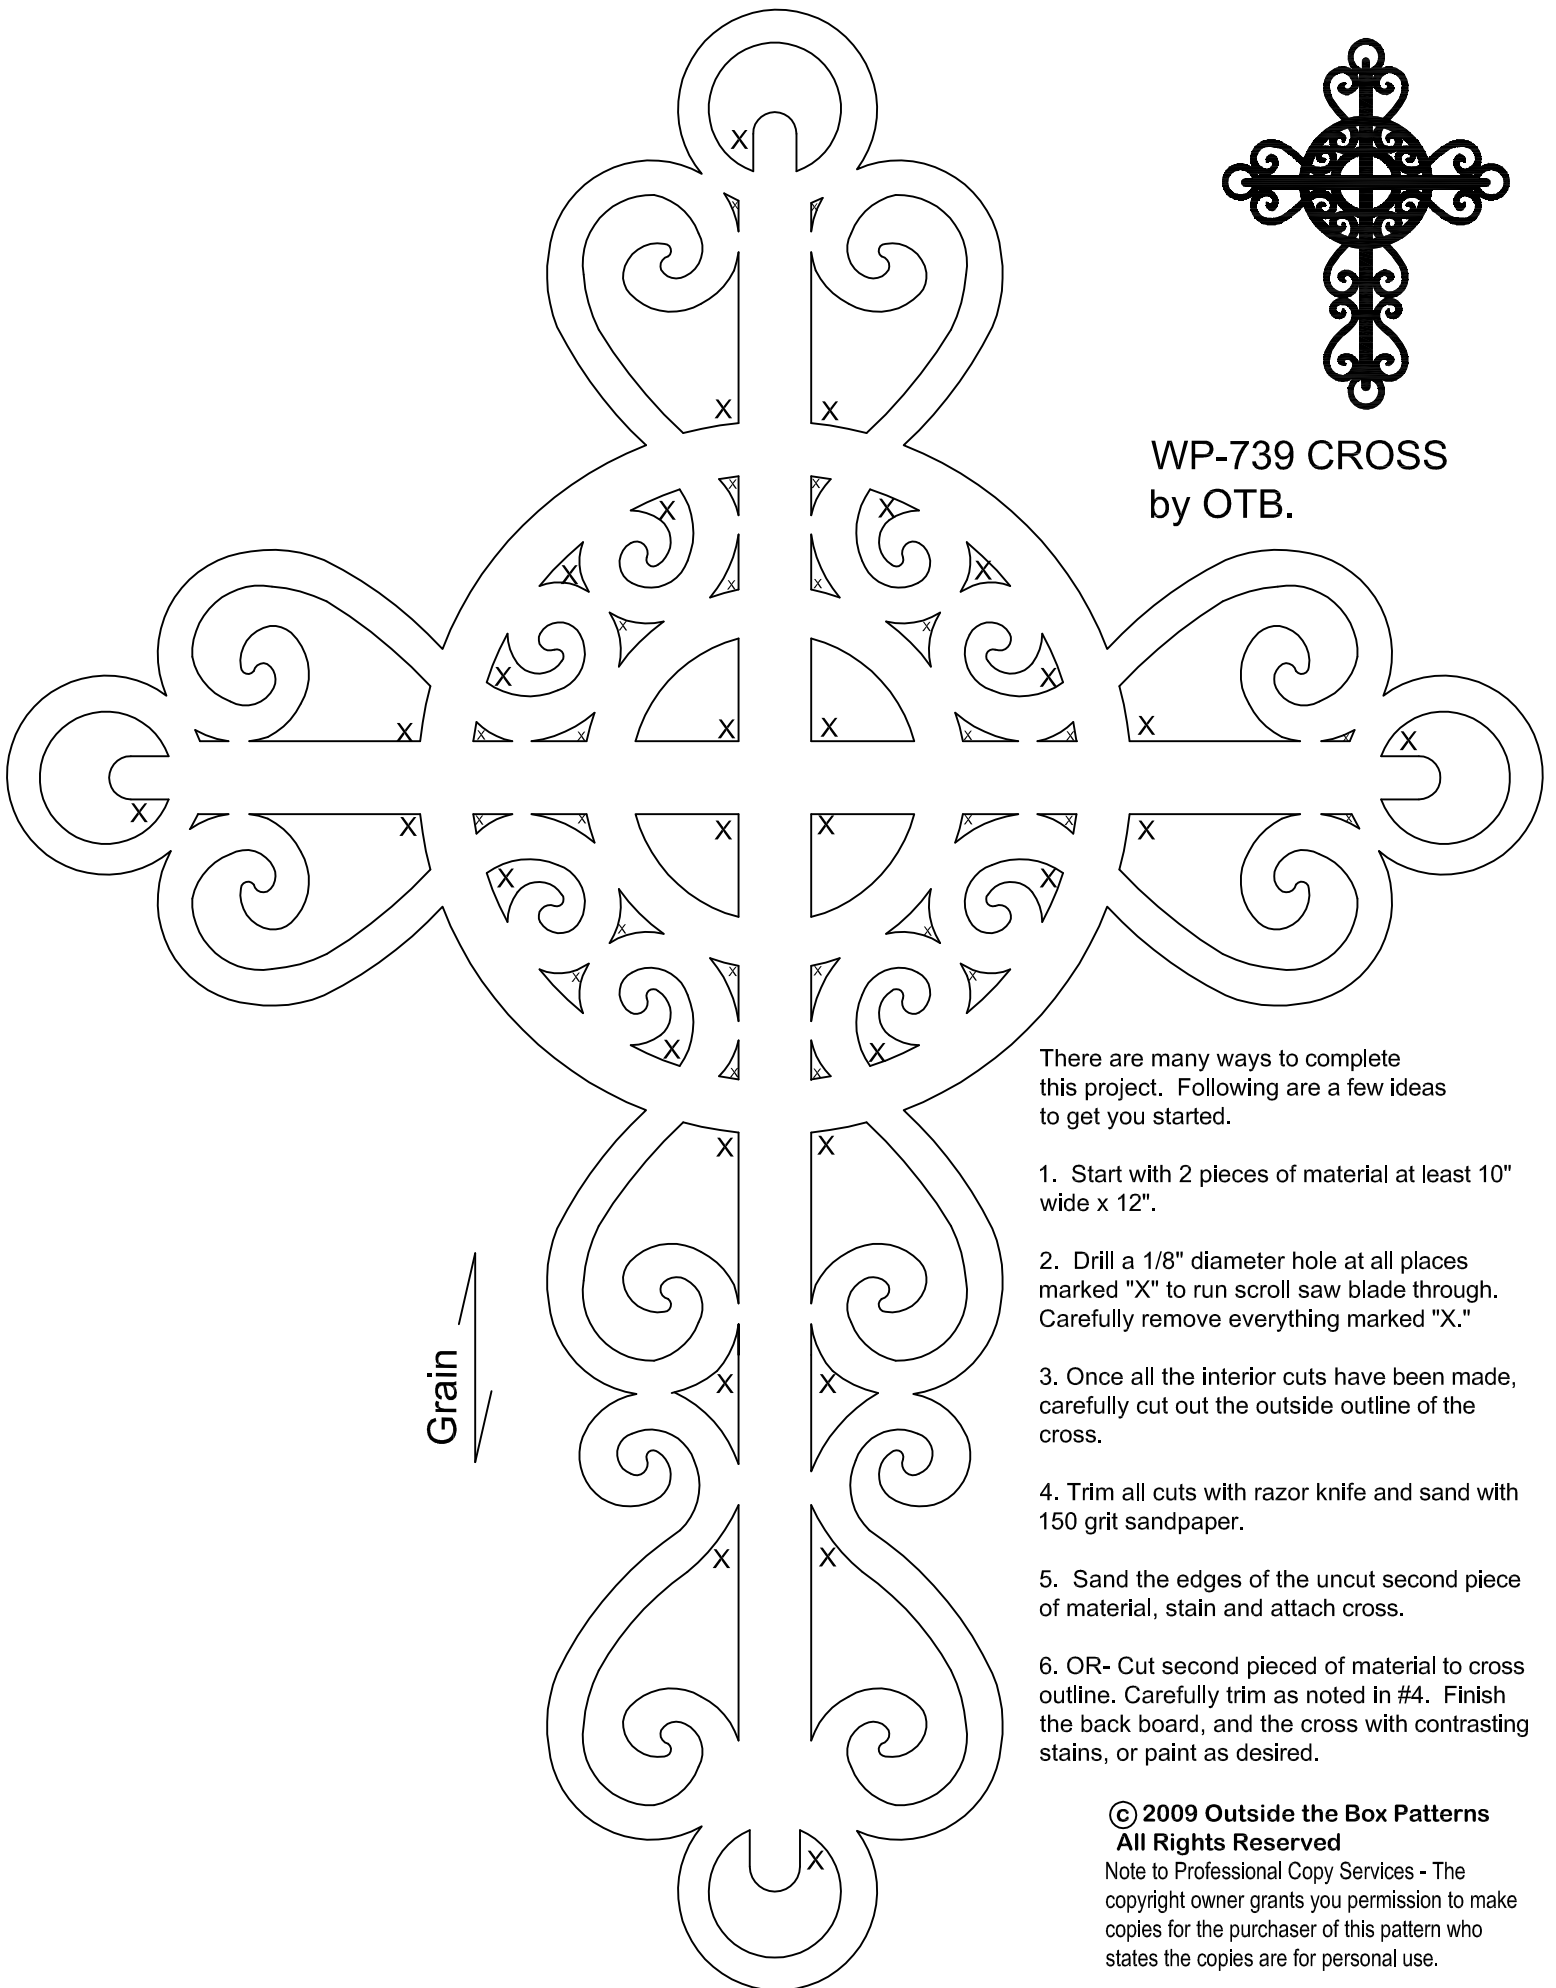



There are many ways to complete this project. Following are a few ideas to get you started.

1. Start with 2 pieces of material at least 10" wide x 12".
2. Drill a 1/8" diameter hole at all places marked "X" to run scroll saw blade through. Carefully remove everything marked "X."
3. Once all the interior cuts have been made, carefully cut out the outside outline of the cross.
4. Trim all cuts with razor knife and sand with 150 grit sandpaper.
5. Sand the edges of the uncut second piece of material, stain and attach cross.
6. OR- Cut second piece of material to cross outline. Carefully trim as noted in #4. Finish the back board, and the cross with contrasting stains, or paint as desired.

**© 2009 Outside the Box Patterns
All Rights Reserved**

Note to Professional Copy Services - The copyright owner grants you permission to make copies for the purchaser of this pattern who states the copies are for personal use.

WP-739 CROSS
Backer by OTB.

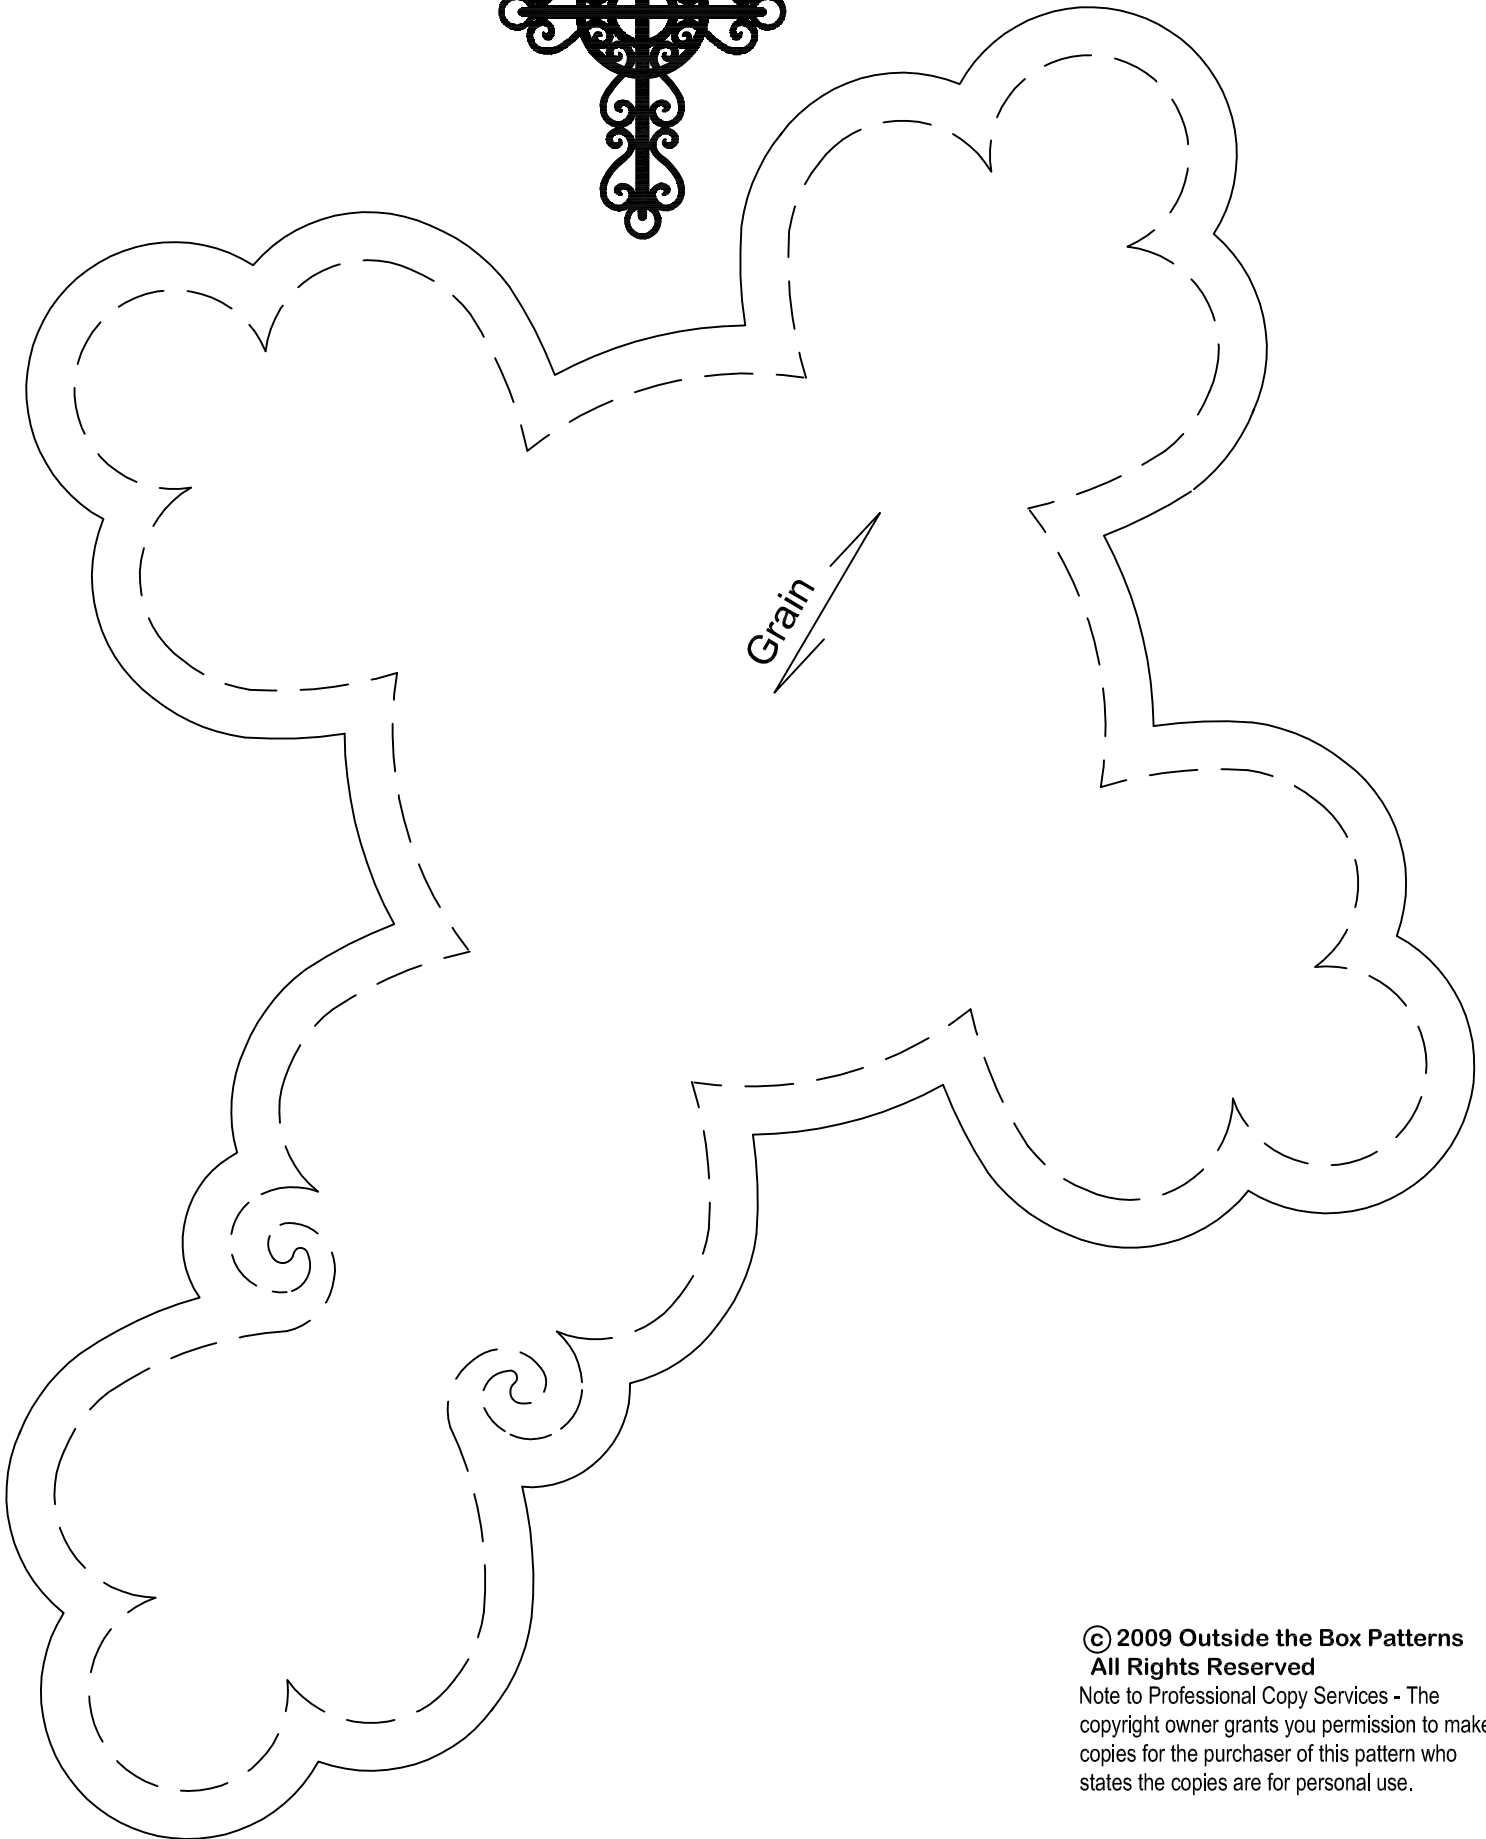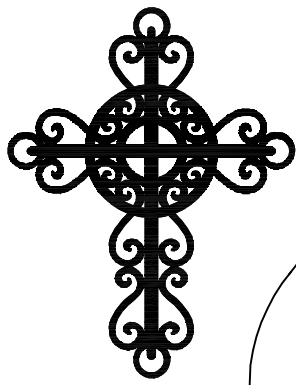

© 2009 Outside the Box Patterns
All Rights Reserved

Note to Professional Copy Services - The
copyright owner grants you permission to make
copies for the purchaser of this pattern who
states the copies are for personal use.