


1. Start with a piece of material at least 12" wide x 16" high.

2. Remove everything marked "R."


Note: If cut correctly the entire horse head will remain as one piece. Sand as required. Stain or paint, attach wall hanger to back.

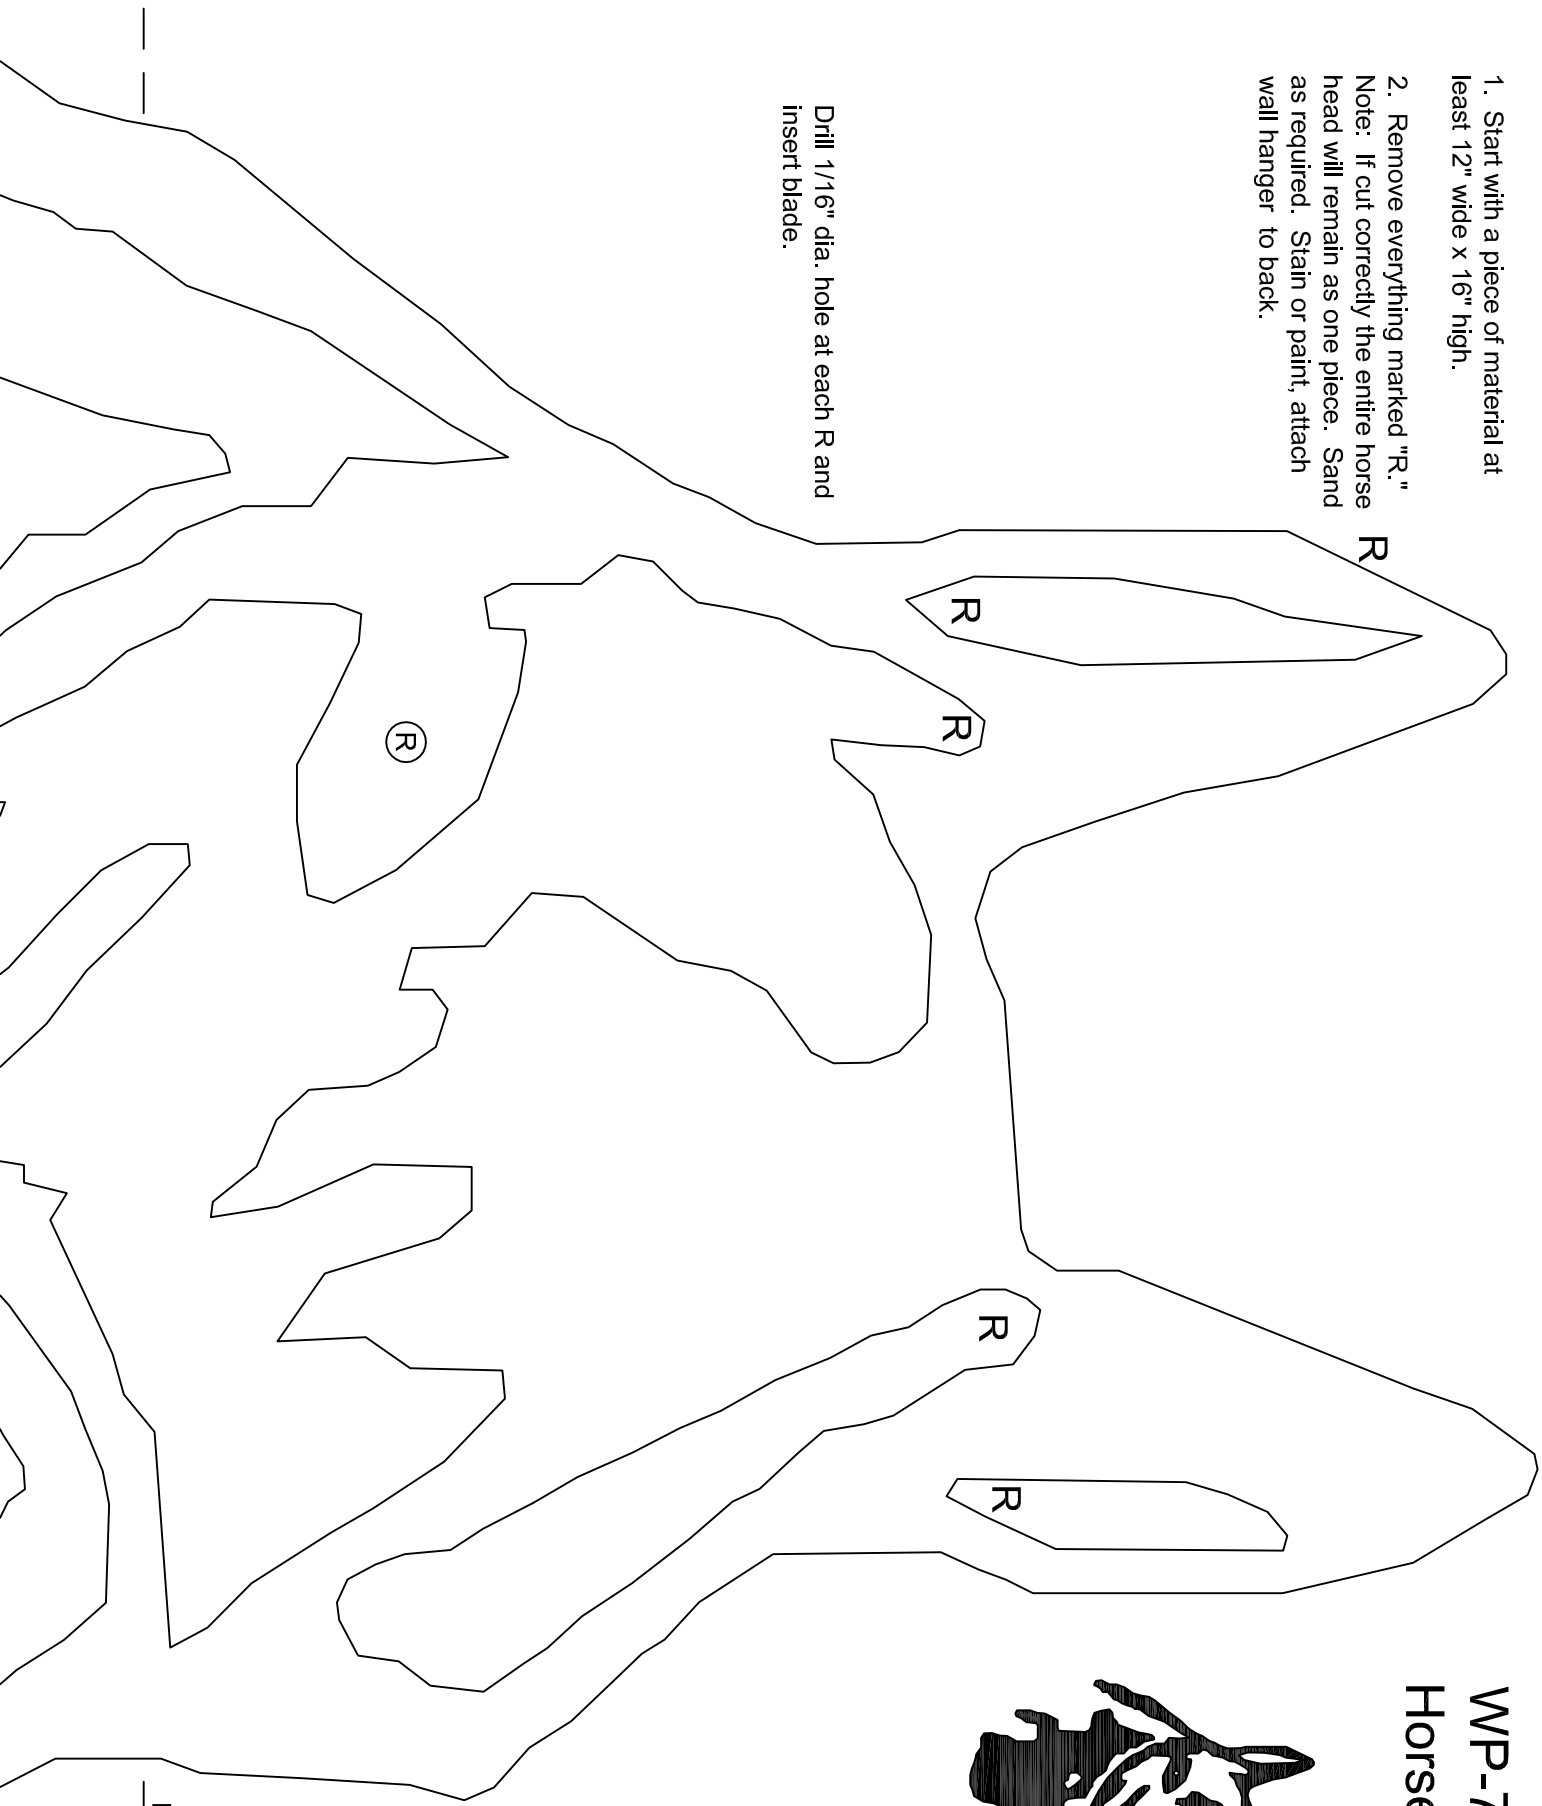

WP-715
Horsehead

Drill 1/16" dia. hole at each R and insert blade.

Match Line

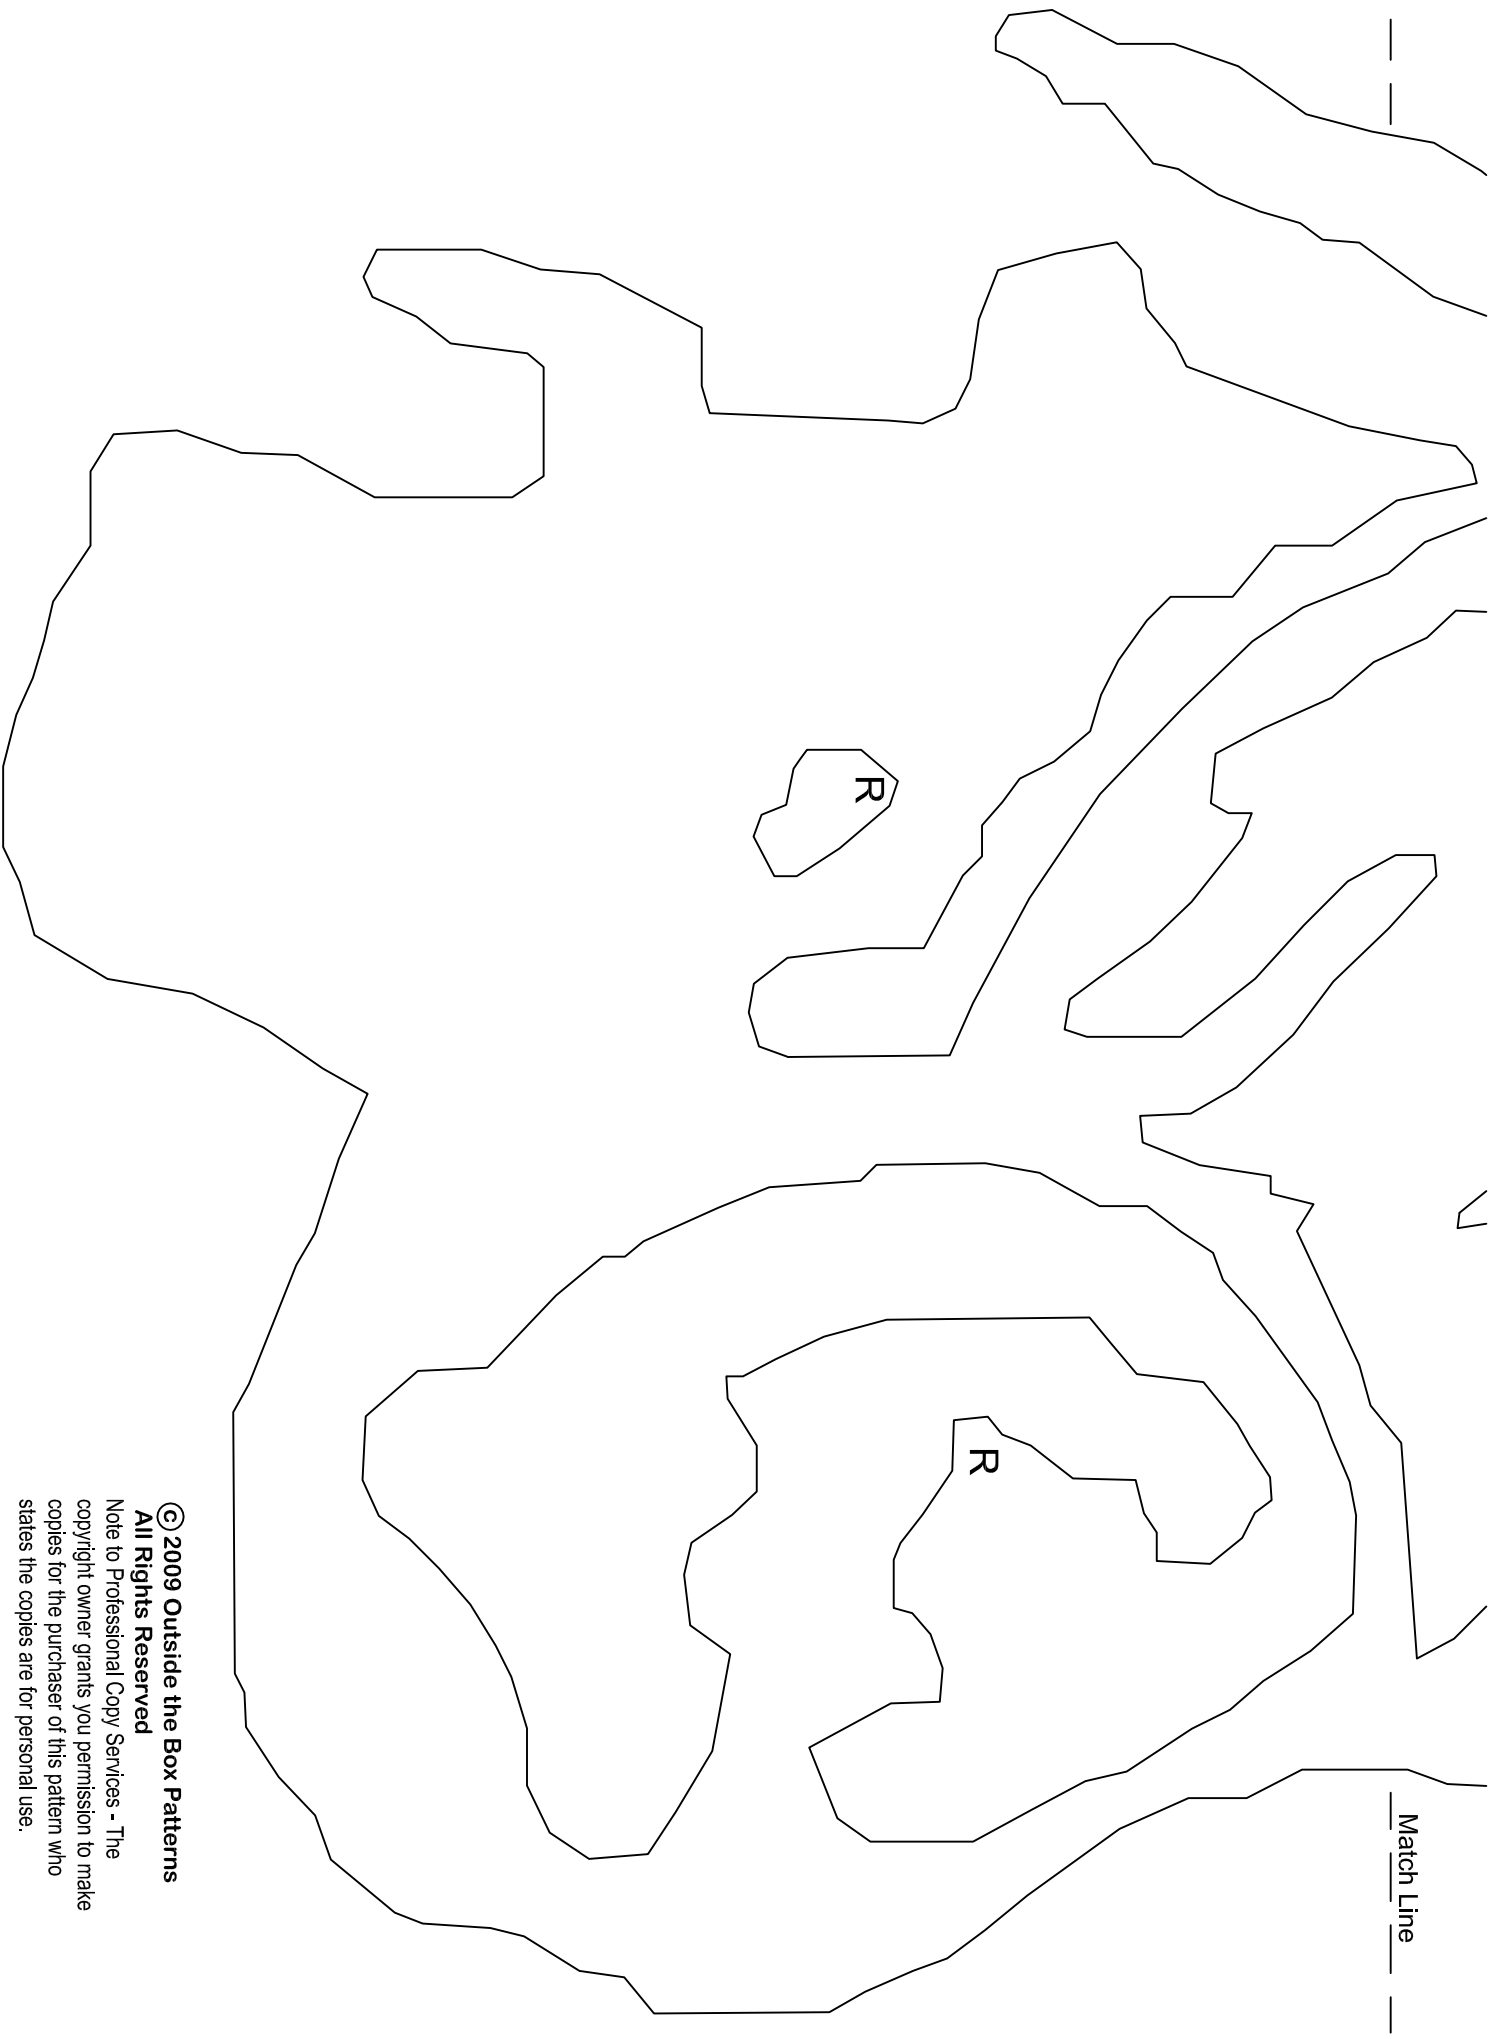

Match Line

R

R

© 2009 Outside the Box Patterns
All Rights Reserved
Note to Professional Copy Services - The
copy/right owner grants you permission to make
copies for the purchaser of this pattern who
states the copies are for personal use.