




This design is delicate and must be handled carefully. A spiral blade will minimize turning the project.

1. Start with 2 pieces of material about 15" wide x 10 1/2" high.
2. Cut the pattern from one piece. Trim all cuts with razor knife and sand with 150 grit sandpaper. Stain or paint as desired.
3. Hot glue contrasting felt to uncut piece, then glue the scene to the felt. Add metal hanger to back.

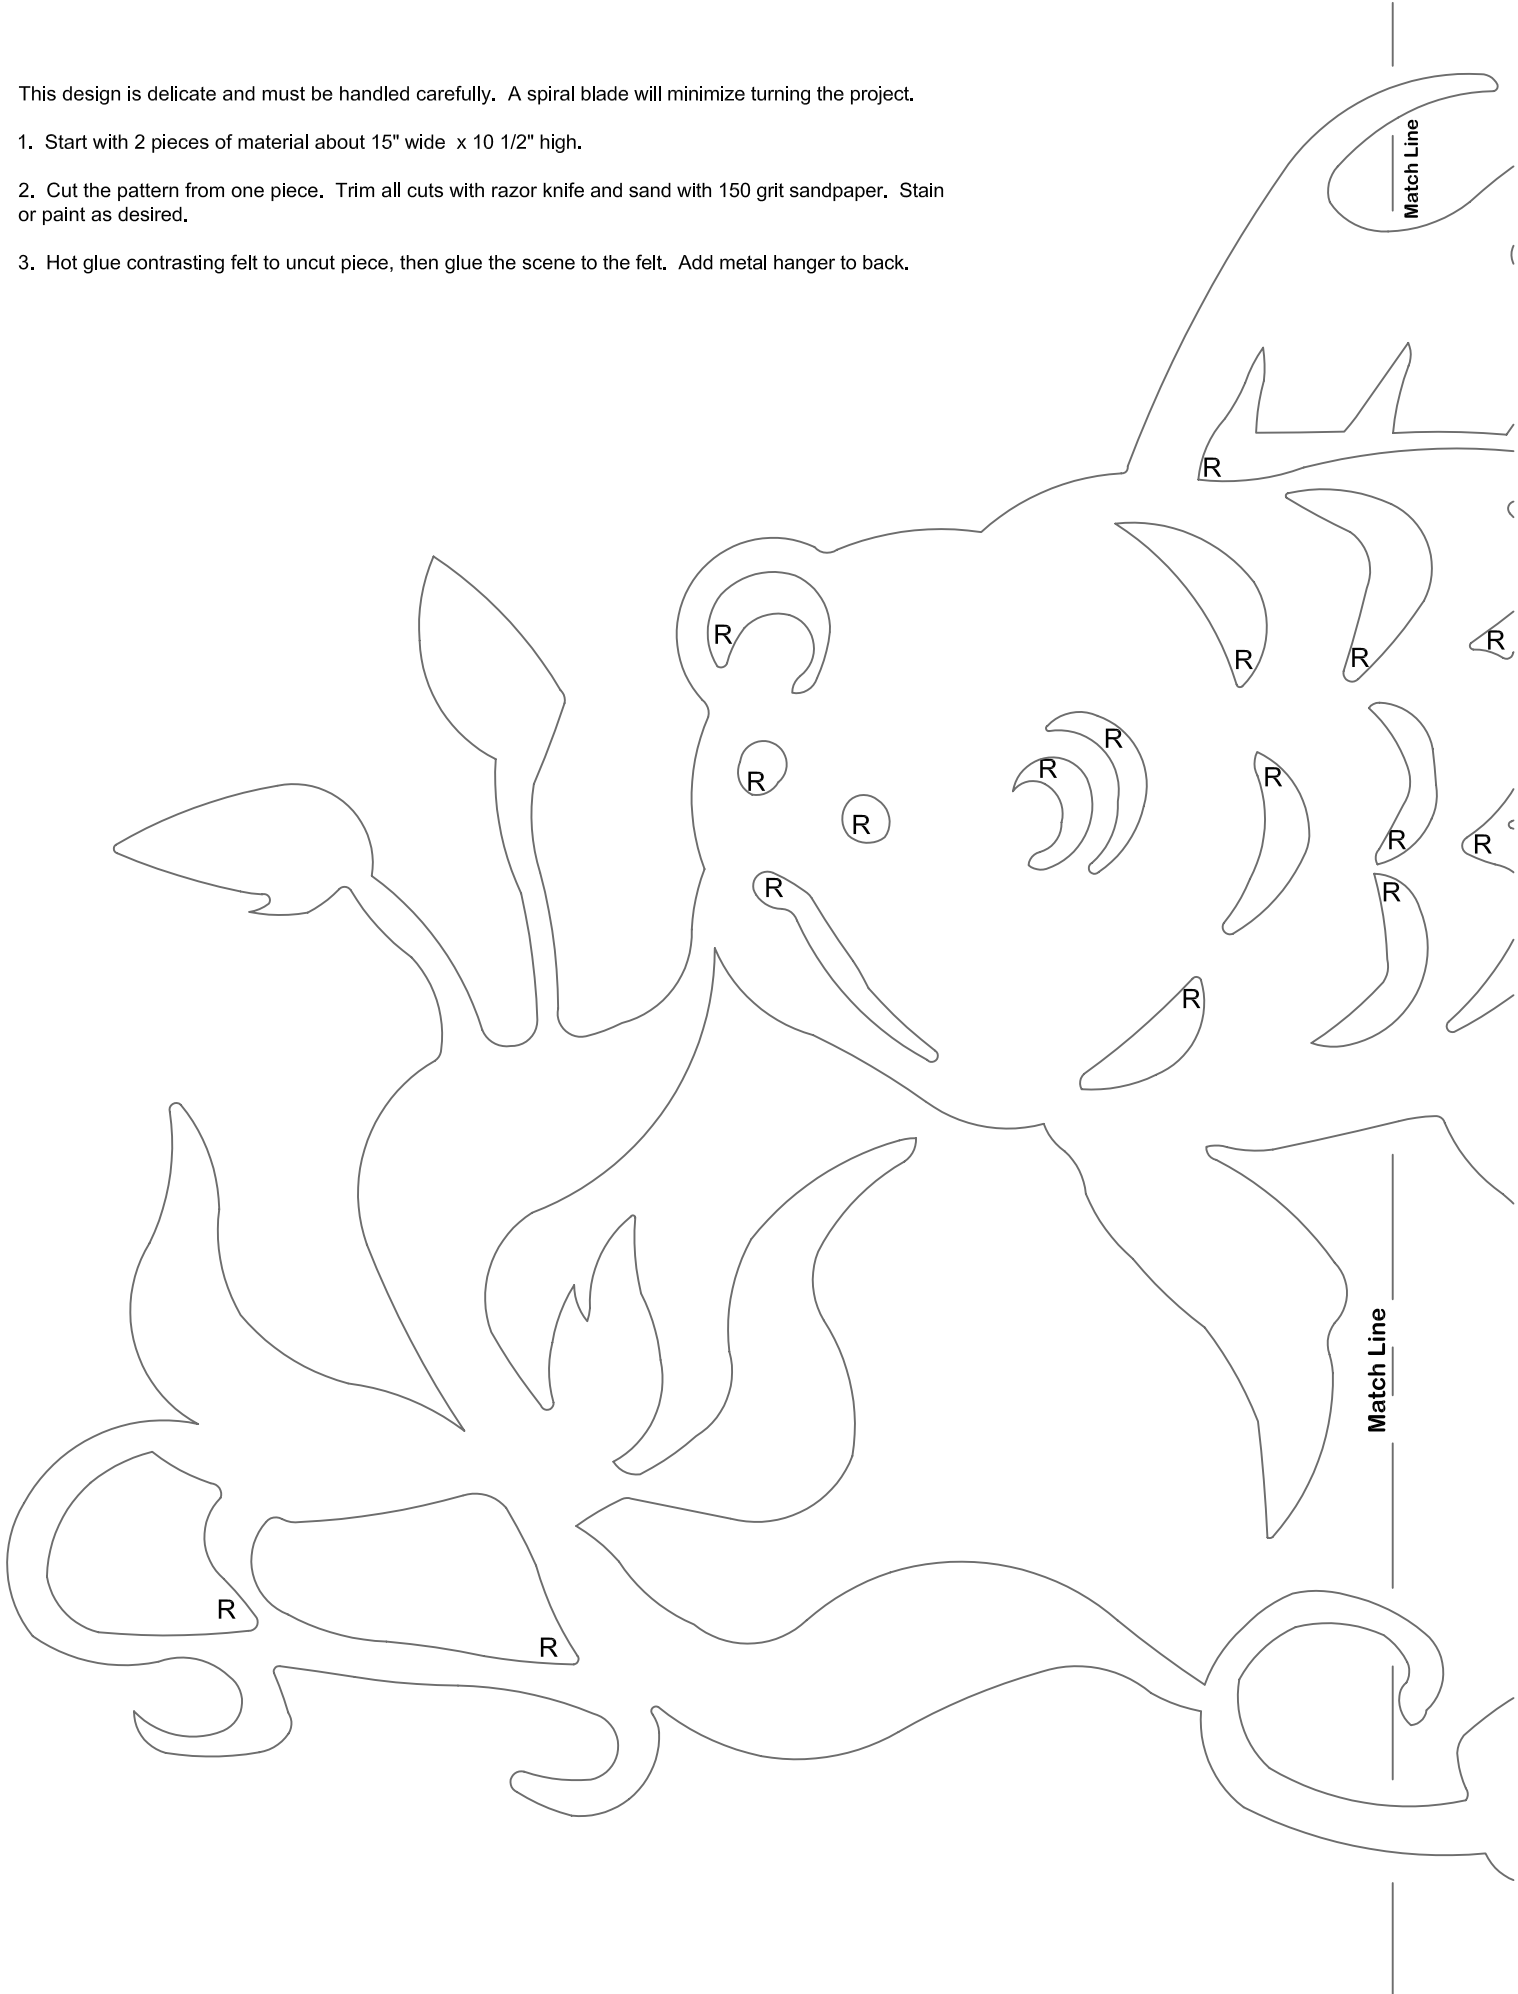

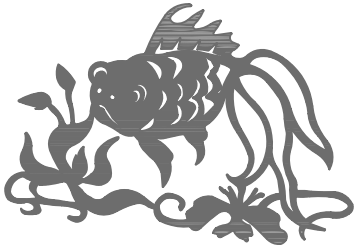

WP-727 KOI PATTERN

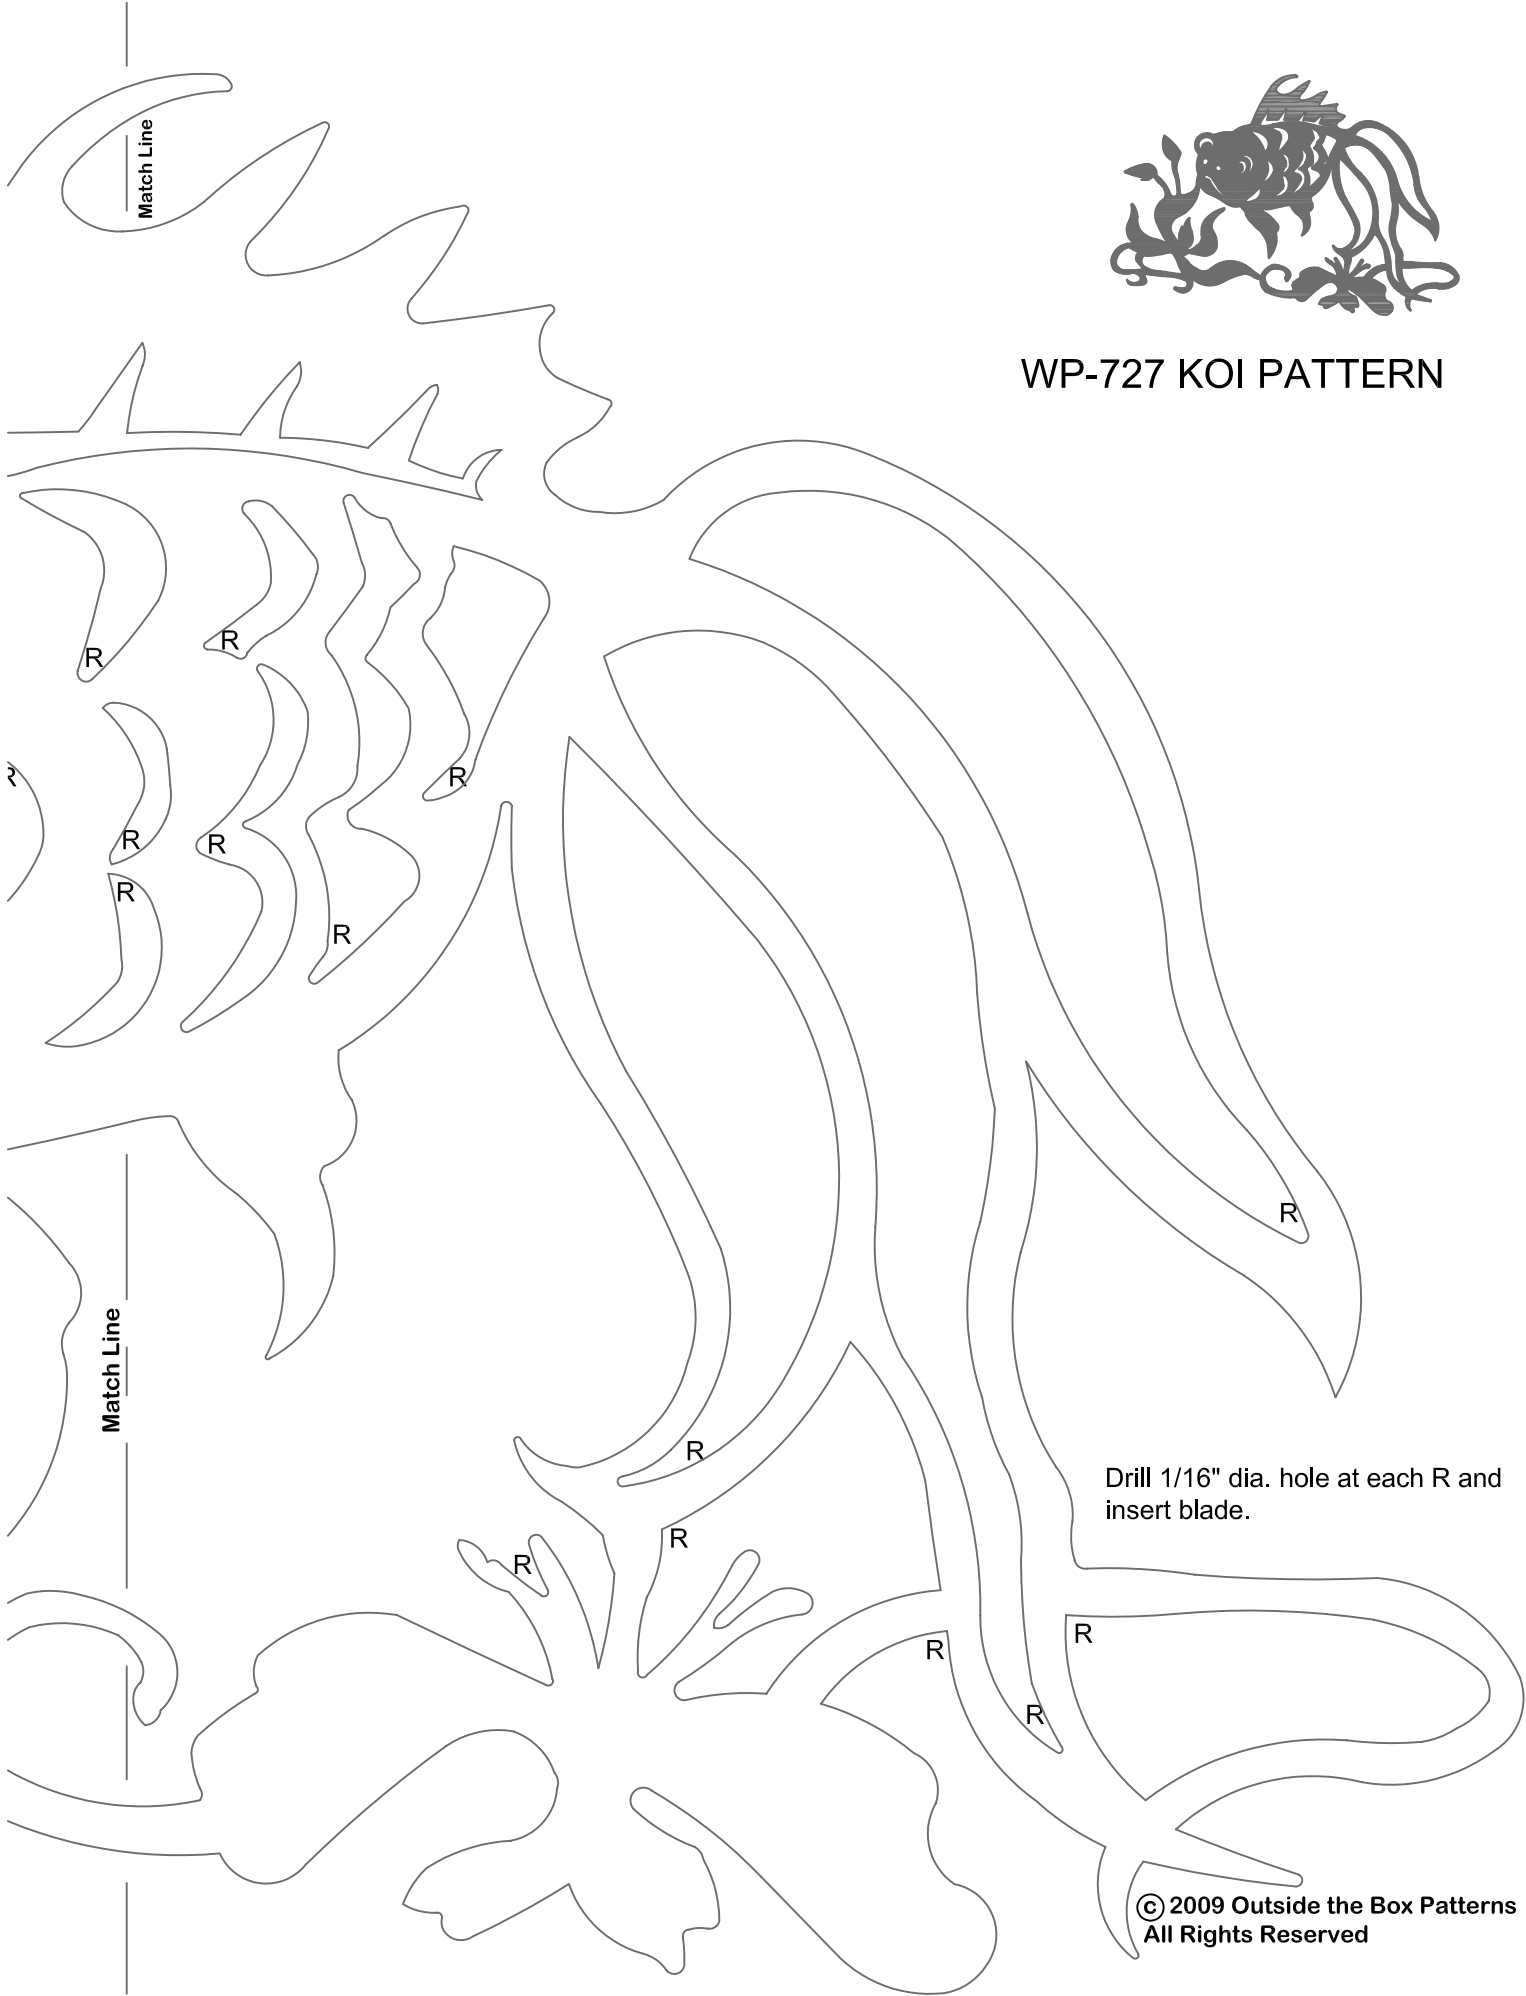

Drill 1/16" dia. hole at each R and insert blade.