


OLD TIME DOVE WING SPUR STRAPS


Recommended material: 6 to 8 oz. leather.

Find patterns for making cowboy gear and other interesting items
at: www.otbpatterns.com

This Dove Wing Spur Strap Leather Crafting Pattern by OTB Patterns has been laid out to make it easy to find the center. The broken lines around the edges of your patterns can be used to keep your stamping edges straight and smooth. Lay your patterns out to make sure they fit the piece of leather you purchased before you start cutting. For best results, lay both (right and left) patterns out so they are laying the same direction on your leather.

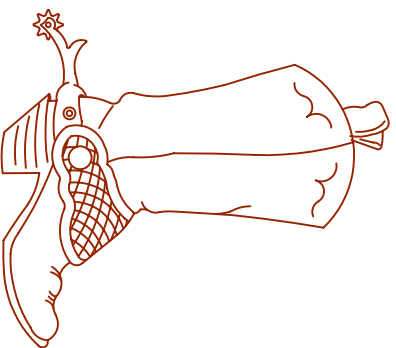

TOP

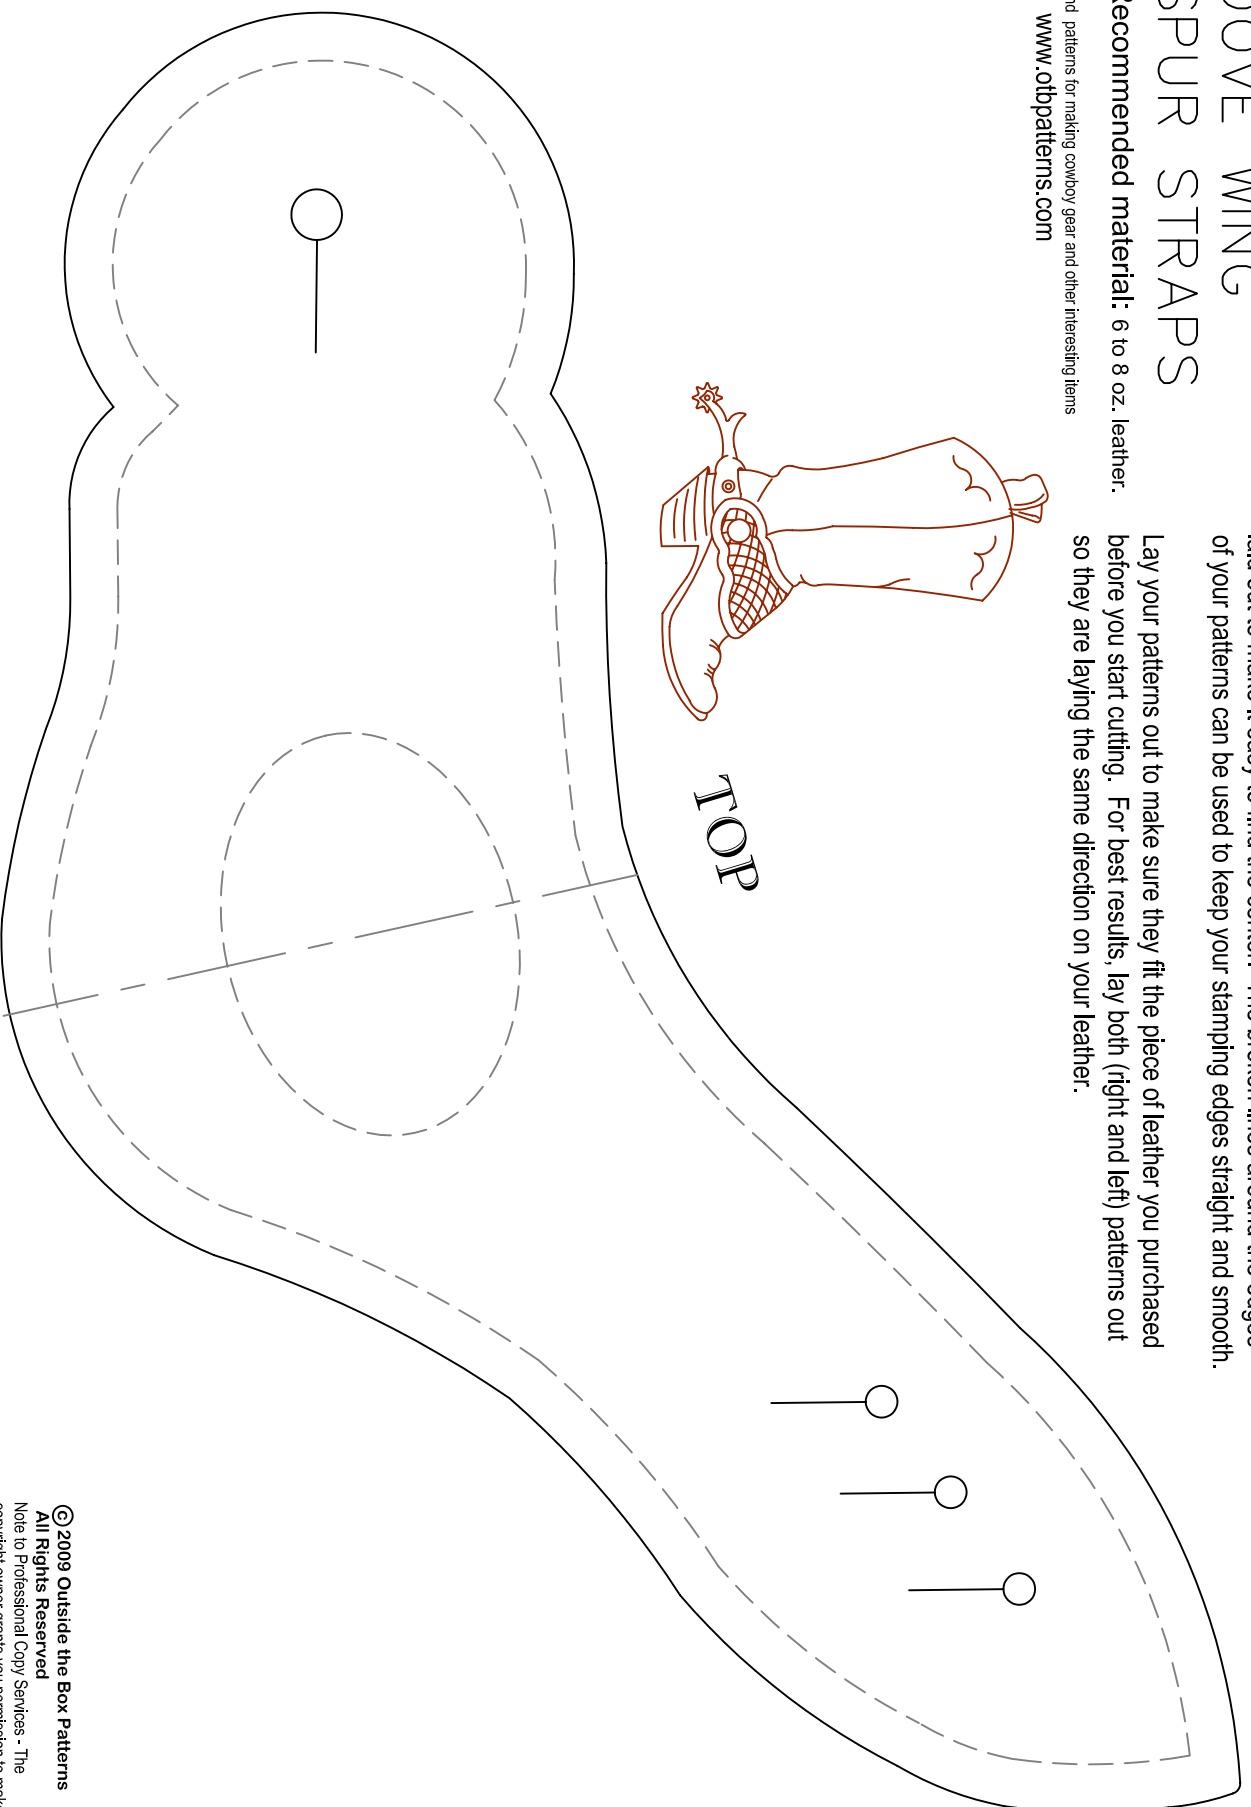



OLD TIME DOVE WING SPUR STRAPS

Recommended material: 6 to 8 oz. leather.

Find patterns for making cowboy gear and other interesting items
at: www.otbpatterns.com

Simple Instructions:

1. Casing the leather. Before starting any leather working it is necessary to case the leather. Using a moistened sponge wet the leather. Do not soak it. The leather should be slightly moist throughout.
2. Position the pattern on the leather. Trace all pattern lines with a stylus using gentle pressure.
3. You are now ready to start carving. Try to avoid letting the leather dry out as repeated moistening and drying will make it harder to carve. If you need to take a break place your leather in a zip lok bag. If the leather starts to dry while working on it, moisten again as needed. Do not store wet leather for more than a few hours or it may get mouldy.
4. Stain to your taste.

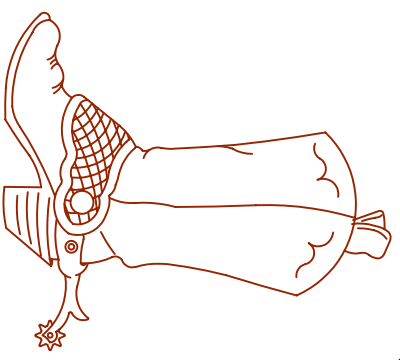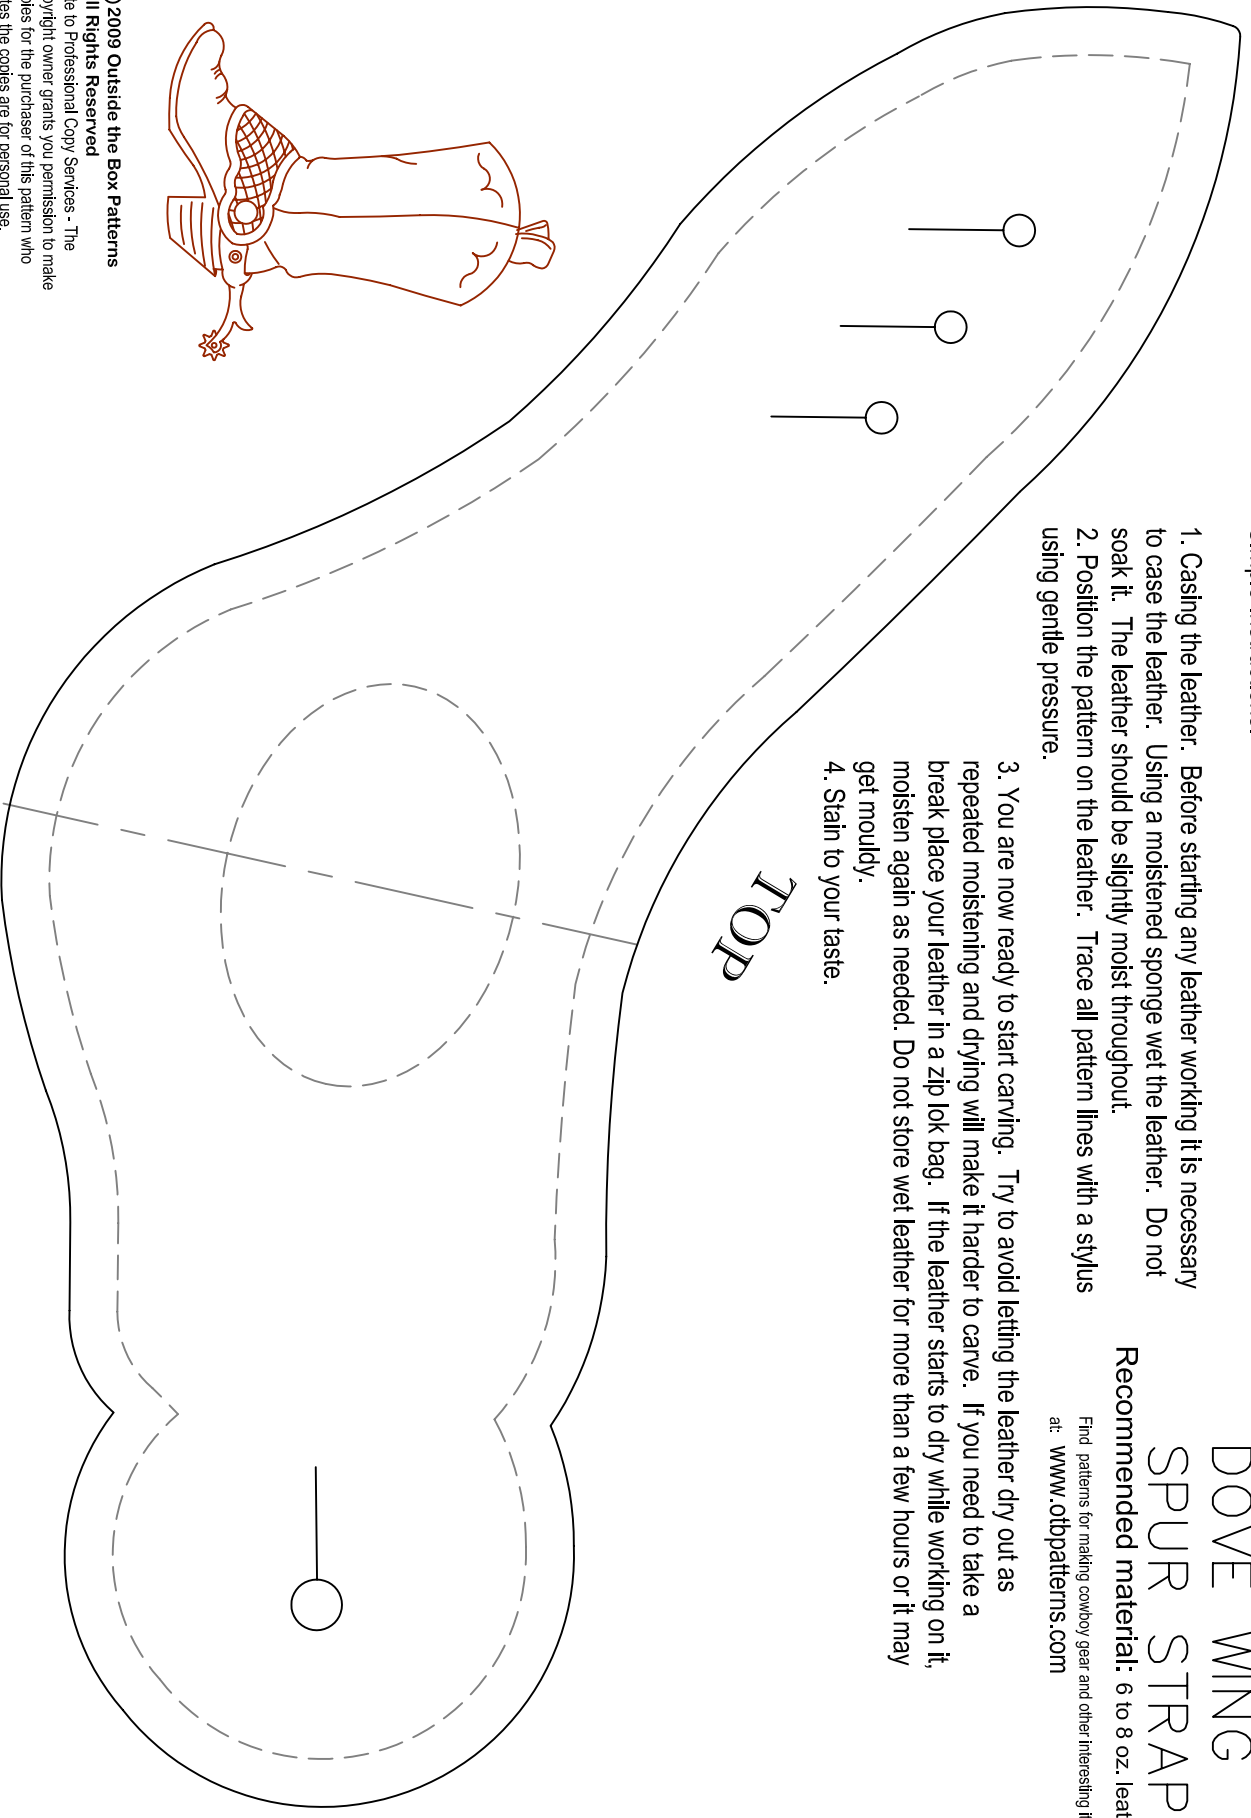

© 2009 Outside the Box Patterns
All Rights Reserved
Note to Professional Copy Services - The
copyright owner grants you permission to make
copies for the purchaser of this pattern who
states the copies are for personal use.