


# WP-1302 UTAH CLOCK PATTERN by OTB PATTERNS.

Find more free or inexpensive scroll saw patterns at [www.otbpatterns.com](http://www.otbpatterns.com)

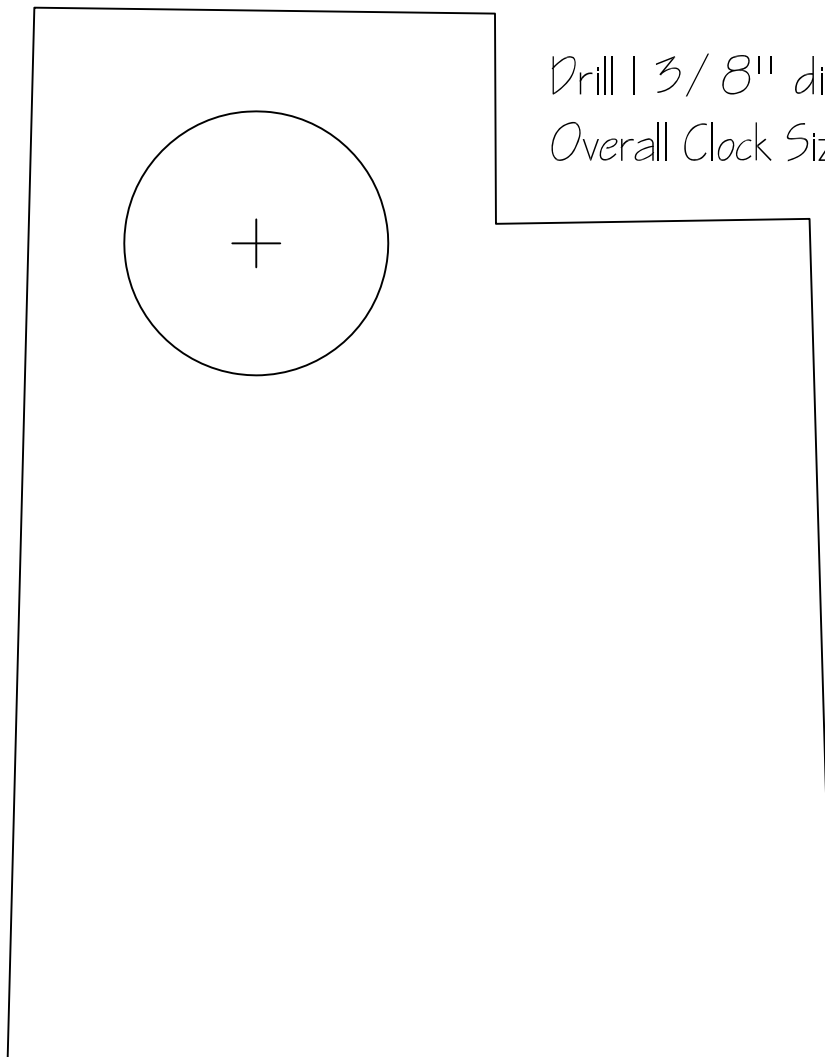

Drill  $1\ 3/8$ " diameter hole.  
Overall Clock Size:  $1\ 7/16$ "

This is a fairly simple project that can be used to practice cutting with a scroll saw. When finished, it will be an item anyone can be proud to display.

1. Start with 1 piece of material about  $5\ 1/2$ " X  $4\ 1/2$ ".
2. Glue the pattern to the material. Drill  $1/8$ " holes near the outside of each interior line and a hole near the edge of the outline to feed scroll saw blade through. Carefully cut, following all lines.
3. Carefully sand all cuts smooth. Use a razor knife to remove any slivers.
4. Stain, or paint as desired.

*Utah*

For added support attach item to base. See WP-1301 for base pattern selection.