


This is a fairly simple project that can be used to practice cutting with a scroll saw. When finished, it will be an item anyone can be proud to display.

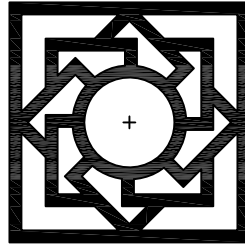


WP-1304 TRIVET CLOCK PATTERN by OTB PATTERNS.

Find more free or inexpensive scroll saw patterns at www.otbpatterns.com

1. Start with 1 piece of material about 5" square.
2. Glue the pattern to the material. Drill 1/8" holes near the outside of each interior line and a hole near the edge of the outline to feed scroll saw blade through. Carefully cut, following all lines.
3. Carefully sand all cuts smooth. Use a razor knife to remove any slivers.
4. Stain, or paint as desired.

DRILL 1 7/8" DIAMETER HOLE
OVERALL CLOCK SIZE: 2"

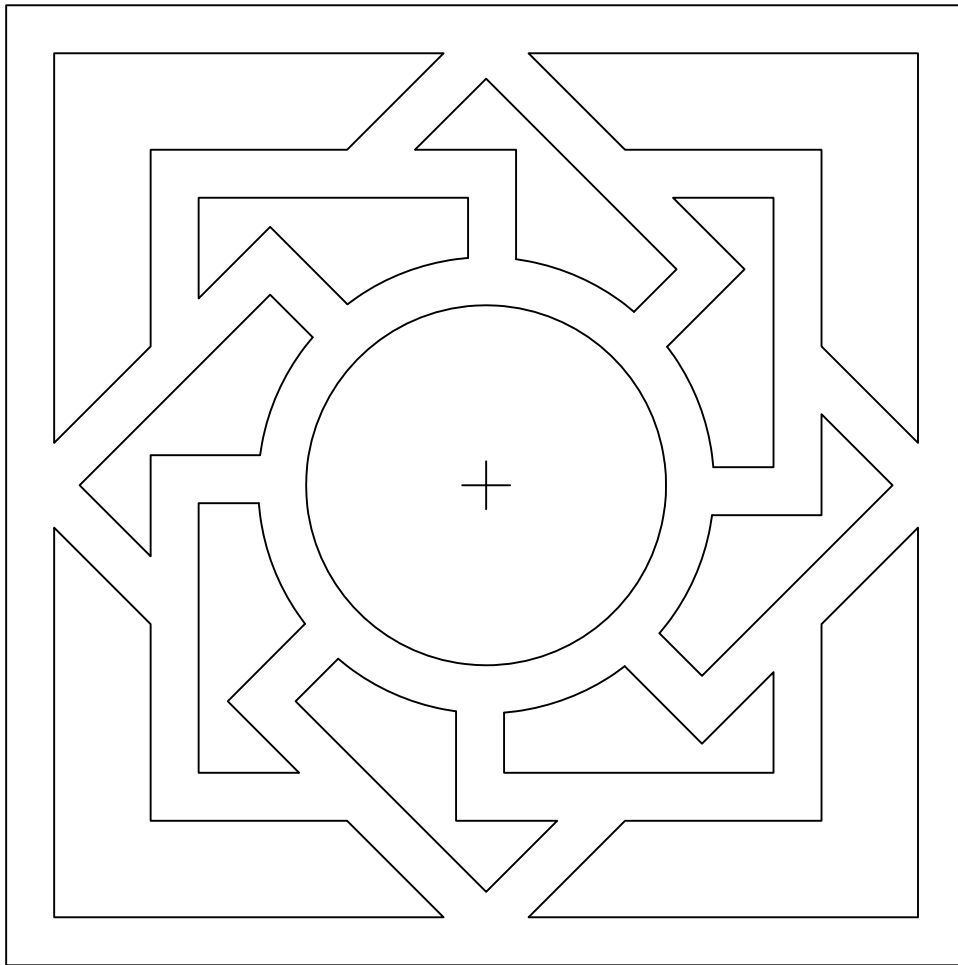

For added support attach item to base. See WP-1301 for base pattern selection.