


# WP-1310 HOME CLOCK PATTERN by OTB PATTERNS.

Find more free or inexpensive scroll saw  
patterns at [www.otbpatterns.com](http://www.otbpatterns.com)

MATCH LINE

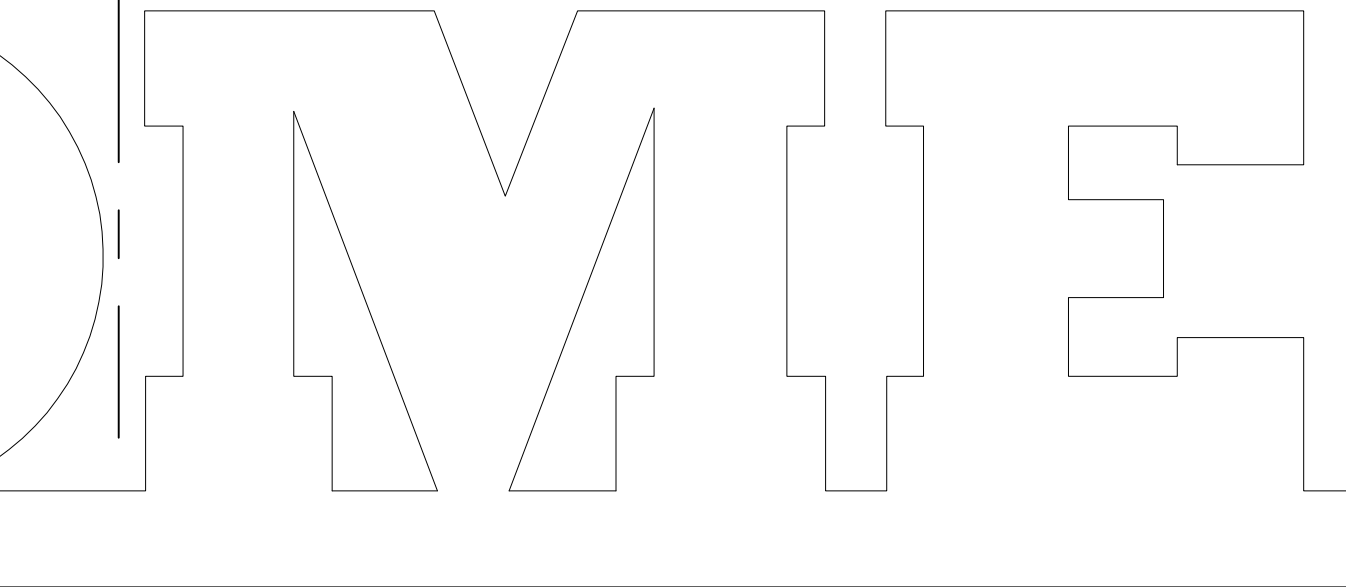


MATCH LINE

1. Start with 1 piece of material about 12" long by 3 1/2" wide.
2. Glue the pattern to the material. Drill 1/8" holes near the outside of each interior line and a hole near the edge of the outline to feed scroll saw blade through. Carefully cut, following all lines.
3. For added stability, cut a rectangular base. Screw and/ or glue to item
4. Carefully sand all cuts smooth. Use a razor knife to remove any slivers.
5. Stain, or paint as desired.

WP-1310 HOME CLOCK  
PATTERN by OTB PATTERNS.

MATCH LINE

DRILL 1 3/8" DIAMETER HOLE  
OVERALL CLOCK SIZE: 1 7/16"

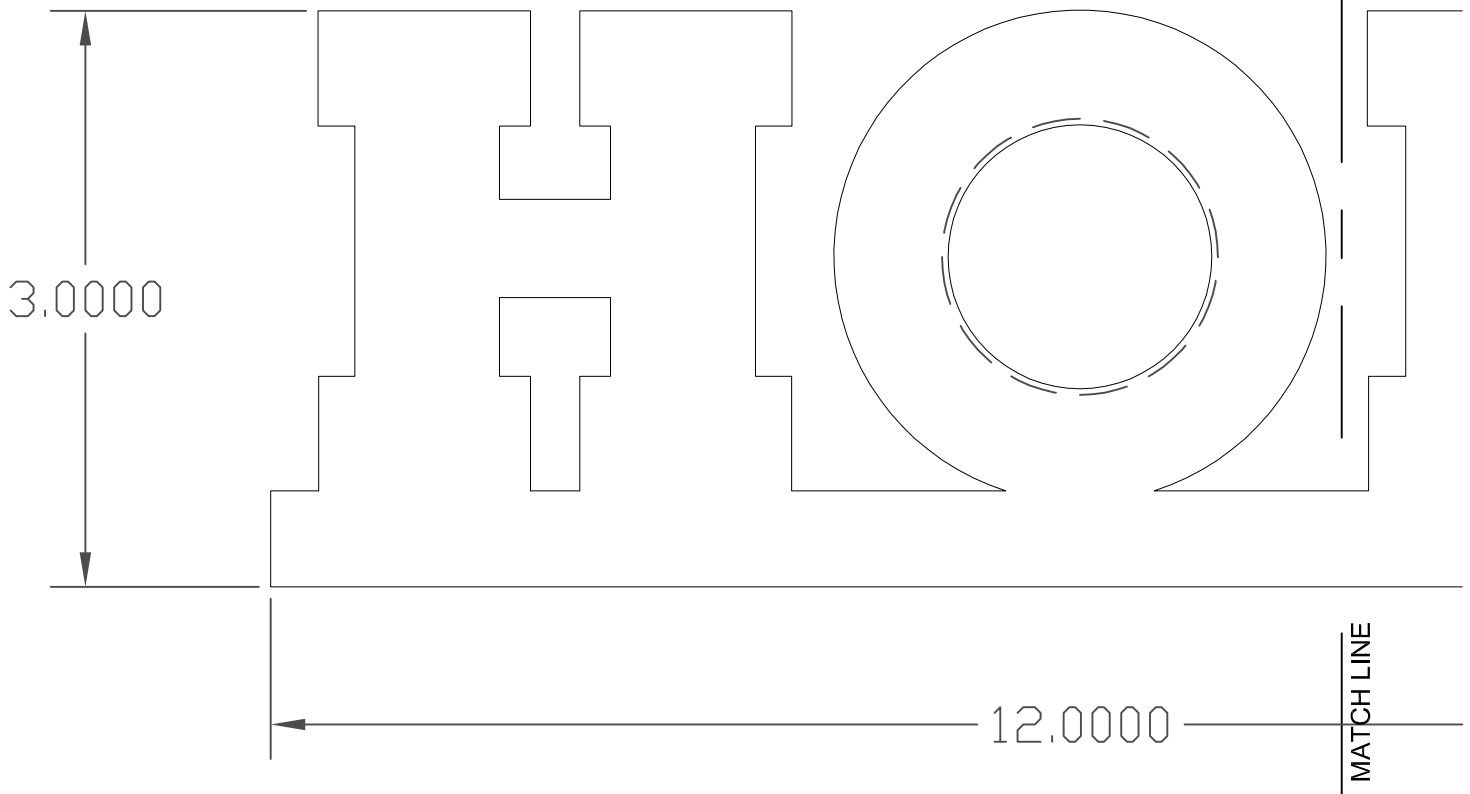

MATCH LINE