



WP-686 BUTTERFLY 2 PATTERN by OTB.

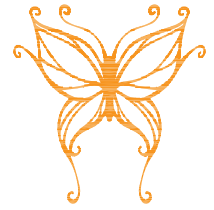

Find more free or inexpensive scroll
saw patterns at www.otbpatterns.com

Finish size about 8 3/8" tall
by 8" wide.

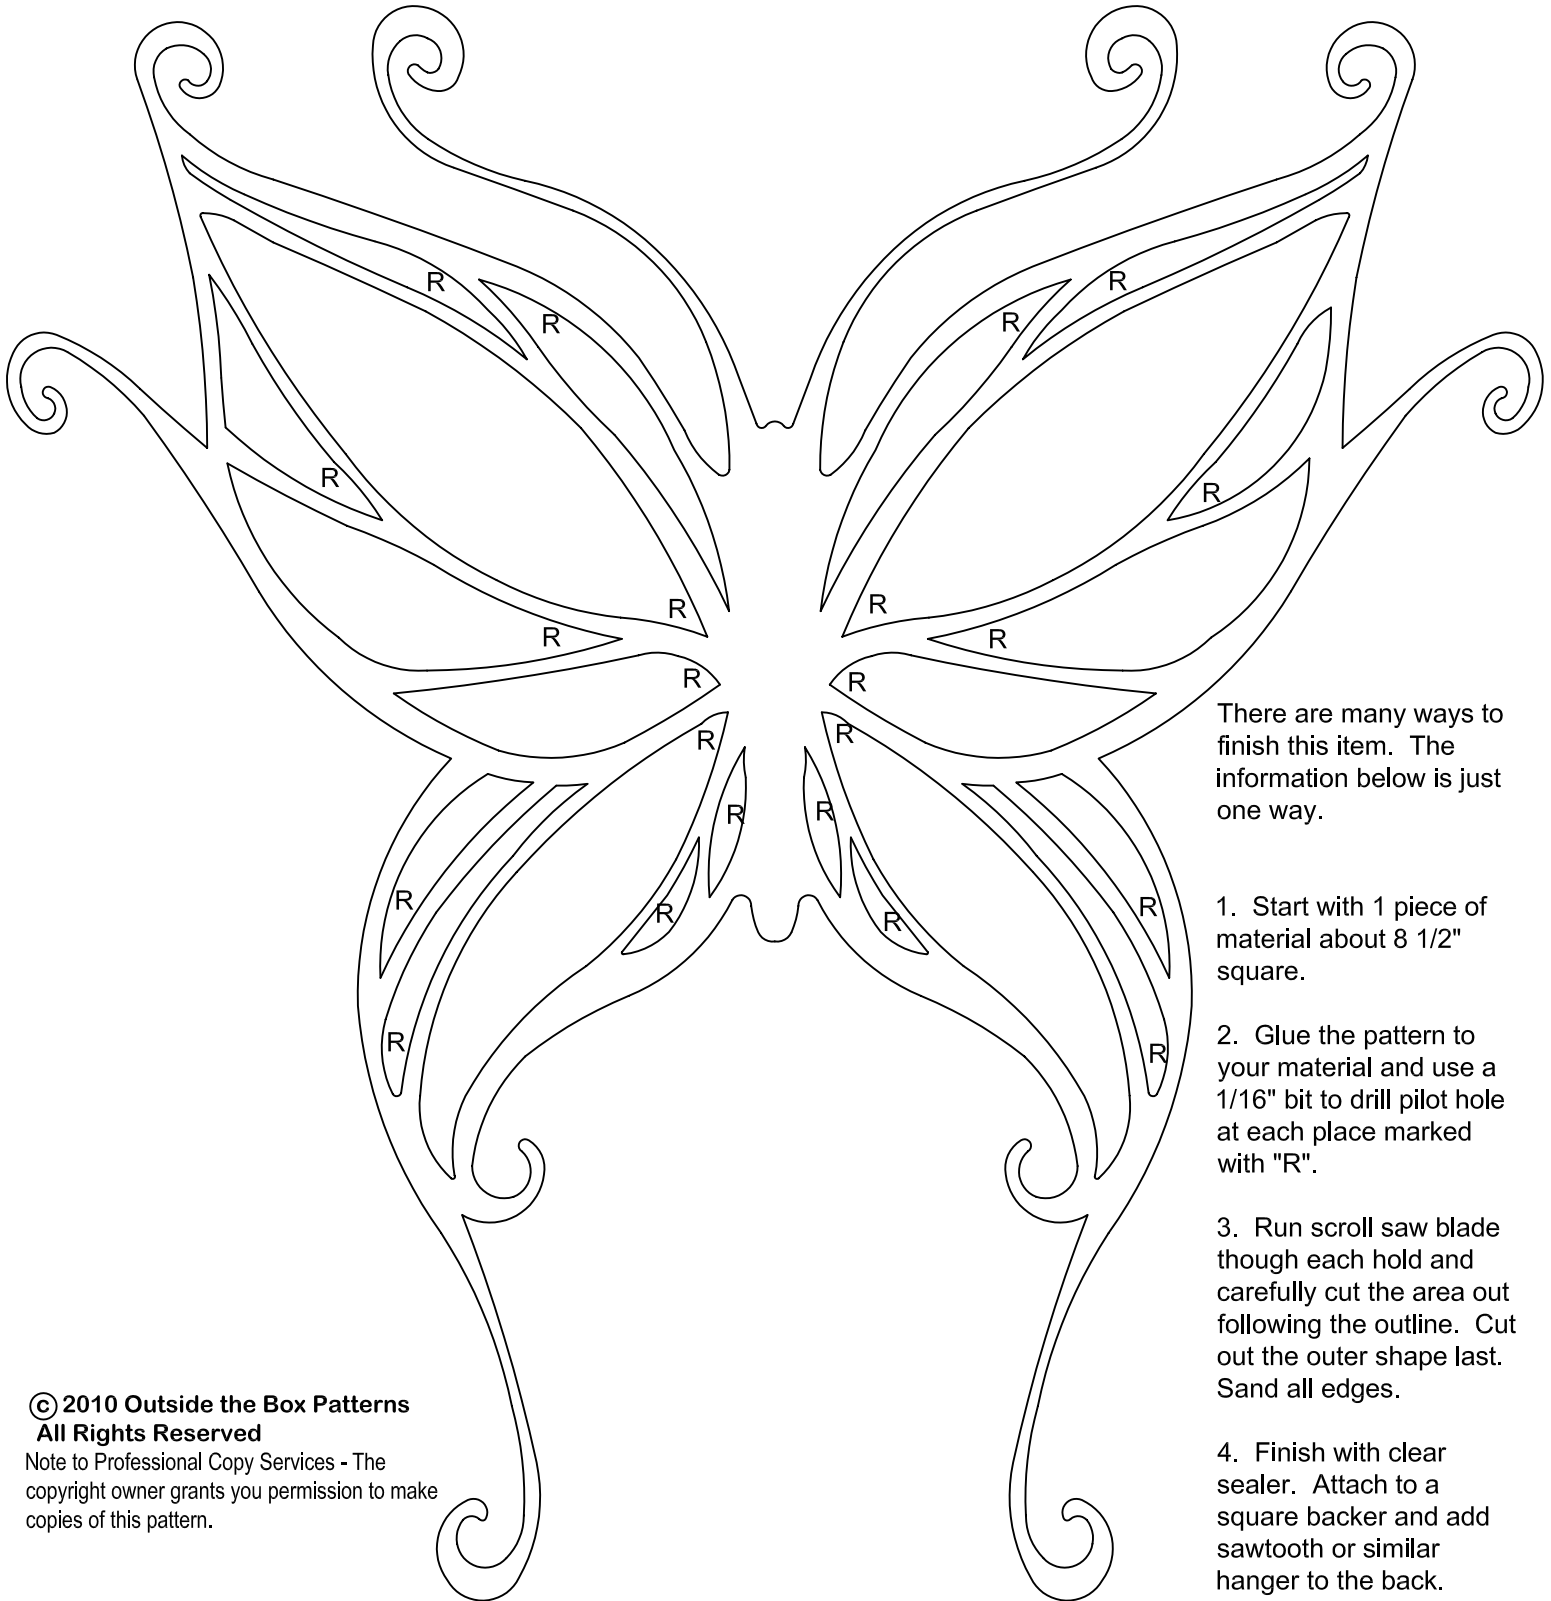

There are many ways to finish this item. The information below is just one way.

1. Start with 1 piece of material about 8 1/2" square.
2. Glue the pattern to your material and use a 1/16" bit to drill pilot hole at each place marked with "R".
3. Run scroll saw blade through each hold and carefully cut the area out following the outline. Cut out the outer shape last. Sand all edges.
4. Finish with clear sealer. Attach to a square backer and add sawtooth or similar hanger to the back.

© 2010 Outside the Box Patterns
All Rights Reserved

Note to Professional Copy Services - The copyright owner grants you permission to make copies of this pattern.