




WP-732 CTR PATTERN by OTB.

Find more free or inexpensive scroll
saw patterns at www.otbpatterns.com

Finish size about 7 1/4" square.

1. Start with 1 piece of material about 8 1/2" square.
2. Glue the pattern to one piece of material and use a 1/16" bit to drill pilot hole at each letter.
3. Run scroll saw blade through each hole and carefully cut the area out following the outline. Cut out the smaller outer shape last. Sand all edges.
4. Cut out the larger outer shape, and sand all edges.
5. Paint or stain the two pieces contrasting colors.
6. Glue the two pieces together. Finish with clear sealer. Attach a sawtooth or similar hanger to the back.

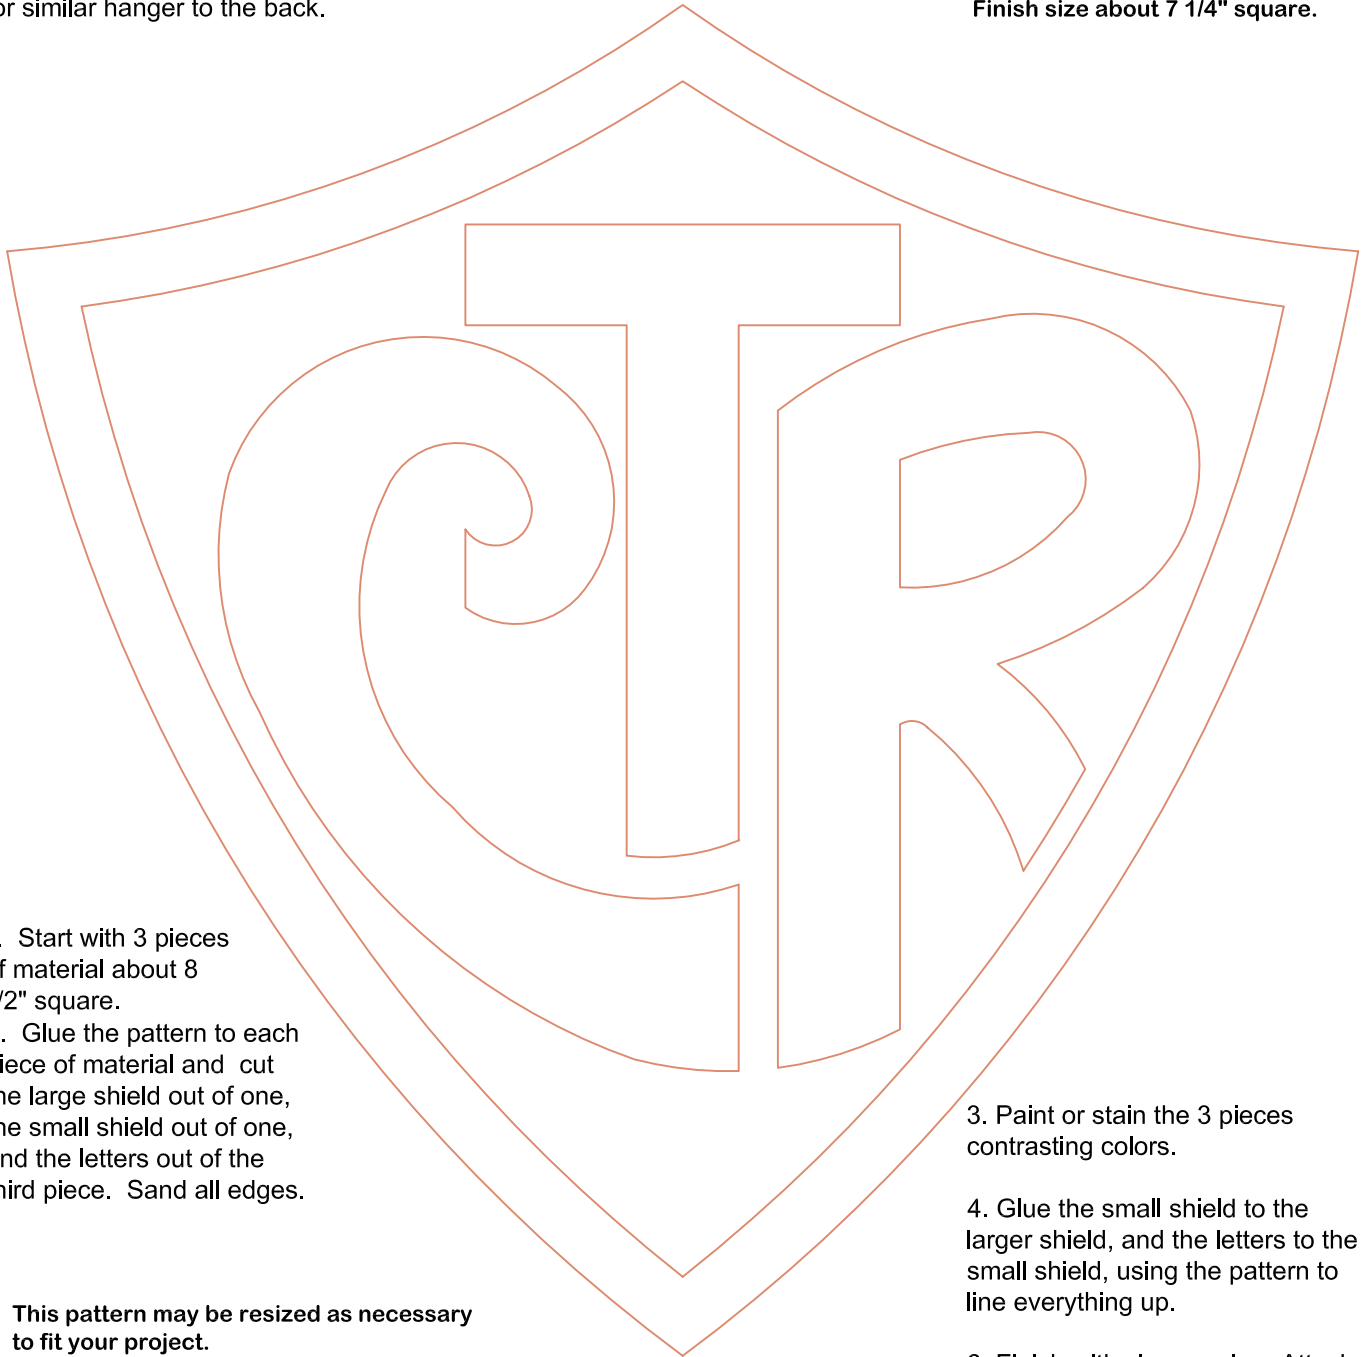

1. Start with 3 pieces of material about 8 1/2" square.
2. Glue the pattern to each piece of material and cut the large shield out of one, the small shield out of one, and the letters out of the third piece. Sand all edges.

3. Paint or stain the 3 pieces contrasting colors.

4. Glue the small shield to the larger shield, and the letters to the small shield, using the pattern to line everything up.

6. Finish with clear sealer. Attach a sawtooth or similar hanger to the back.

This pattern may be resized as necessary to fit your project.
Compliments of OTB Patterns, Roy, Utah
www.otbpatterns.com