


WP-740 Paratrooper Wings

Visit us at www.otbpatterns.com for other free patterns

1. Start with a piece of material at least 18" wide x 6" high.
2. Start by drilling 1/16" starter holes at the ends of lines. Carefully cut following each line. Stop at breaks so parts remain together. Cut exterior shape last. Sand as required. Round outside edges to suit. Stain or paint, attach wall hanger to back.

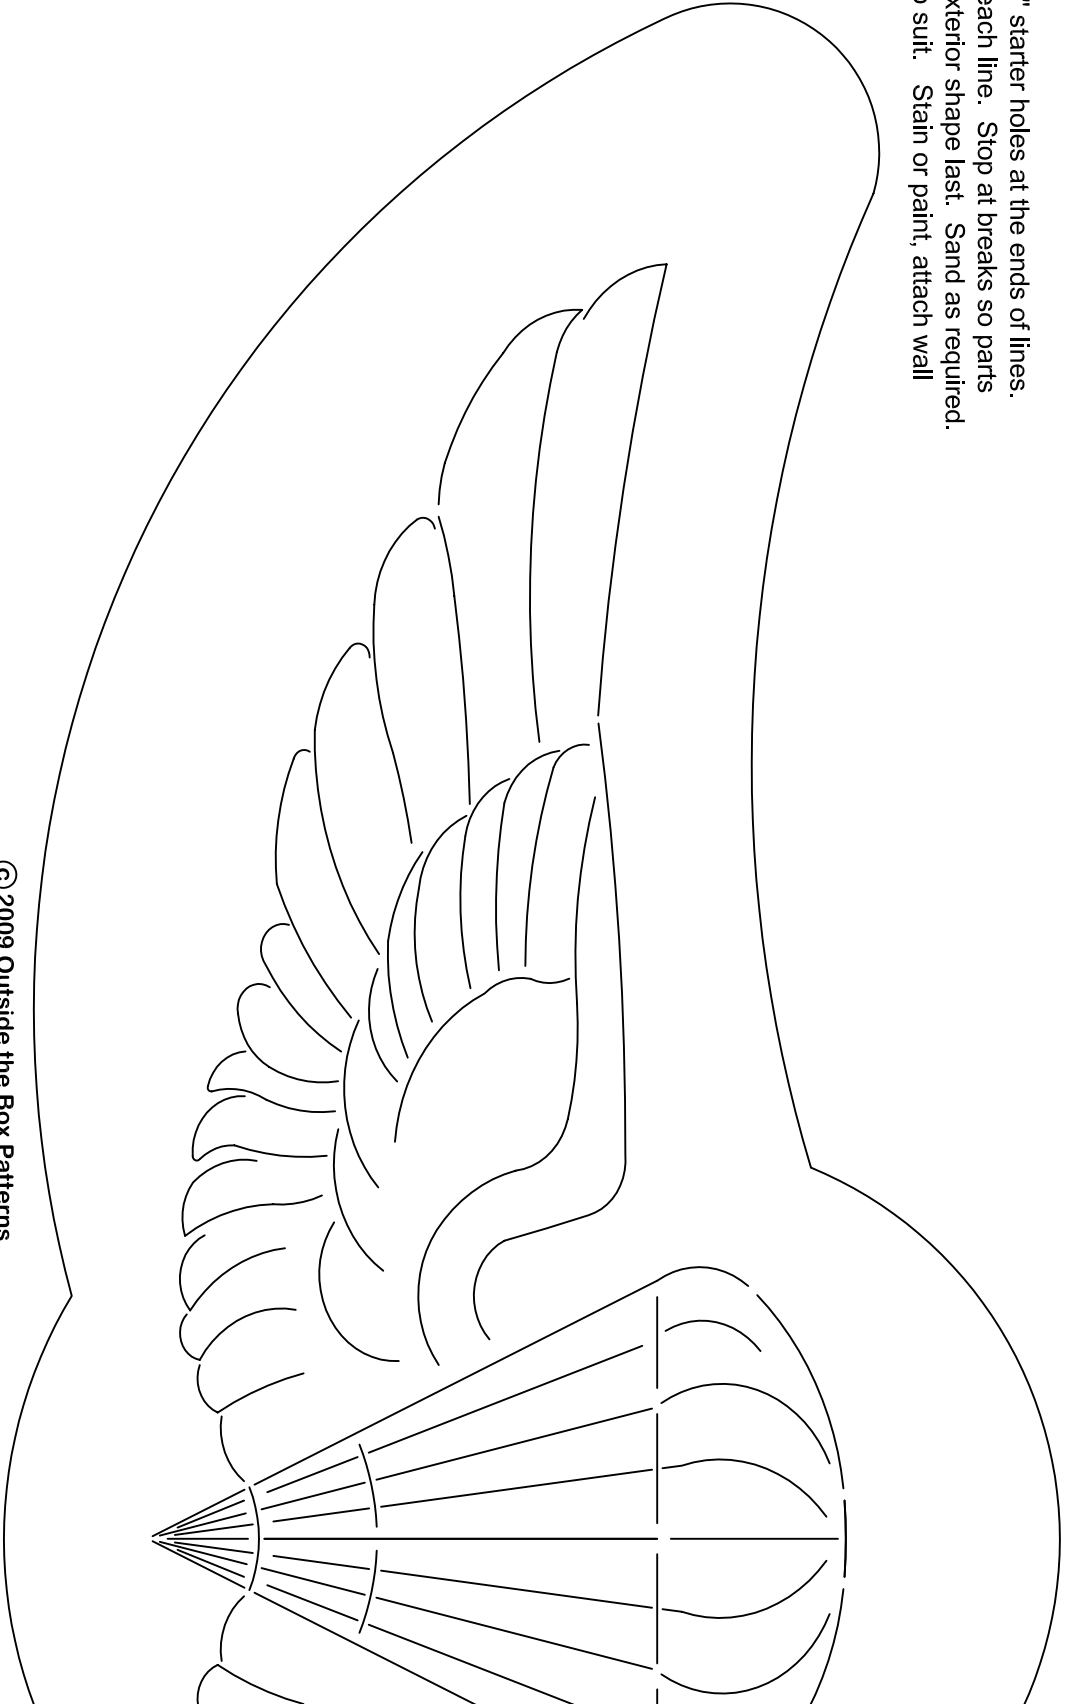

© 2009 Outside the Box Patterns
All Rights Reserved


Note to Professional Copy Services - The
copyright owner grants you permission to make
copies for the purchaser of this pattern who
states the copies are for personal use.

Match Line

Match Line

WP-740 Paratrooper Wings

Match Line

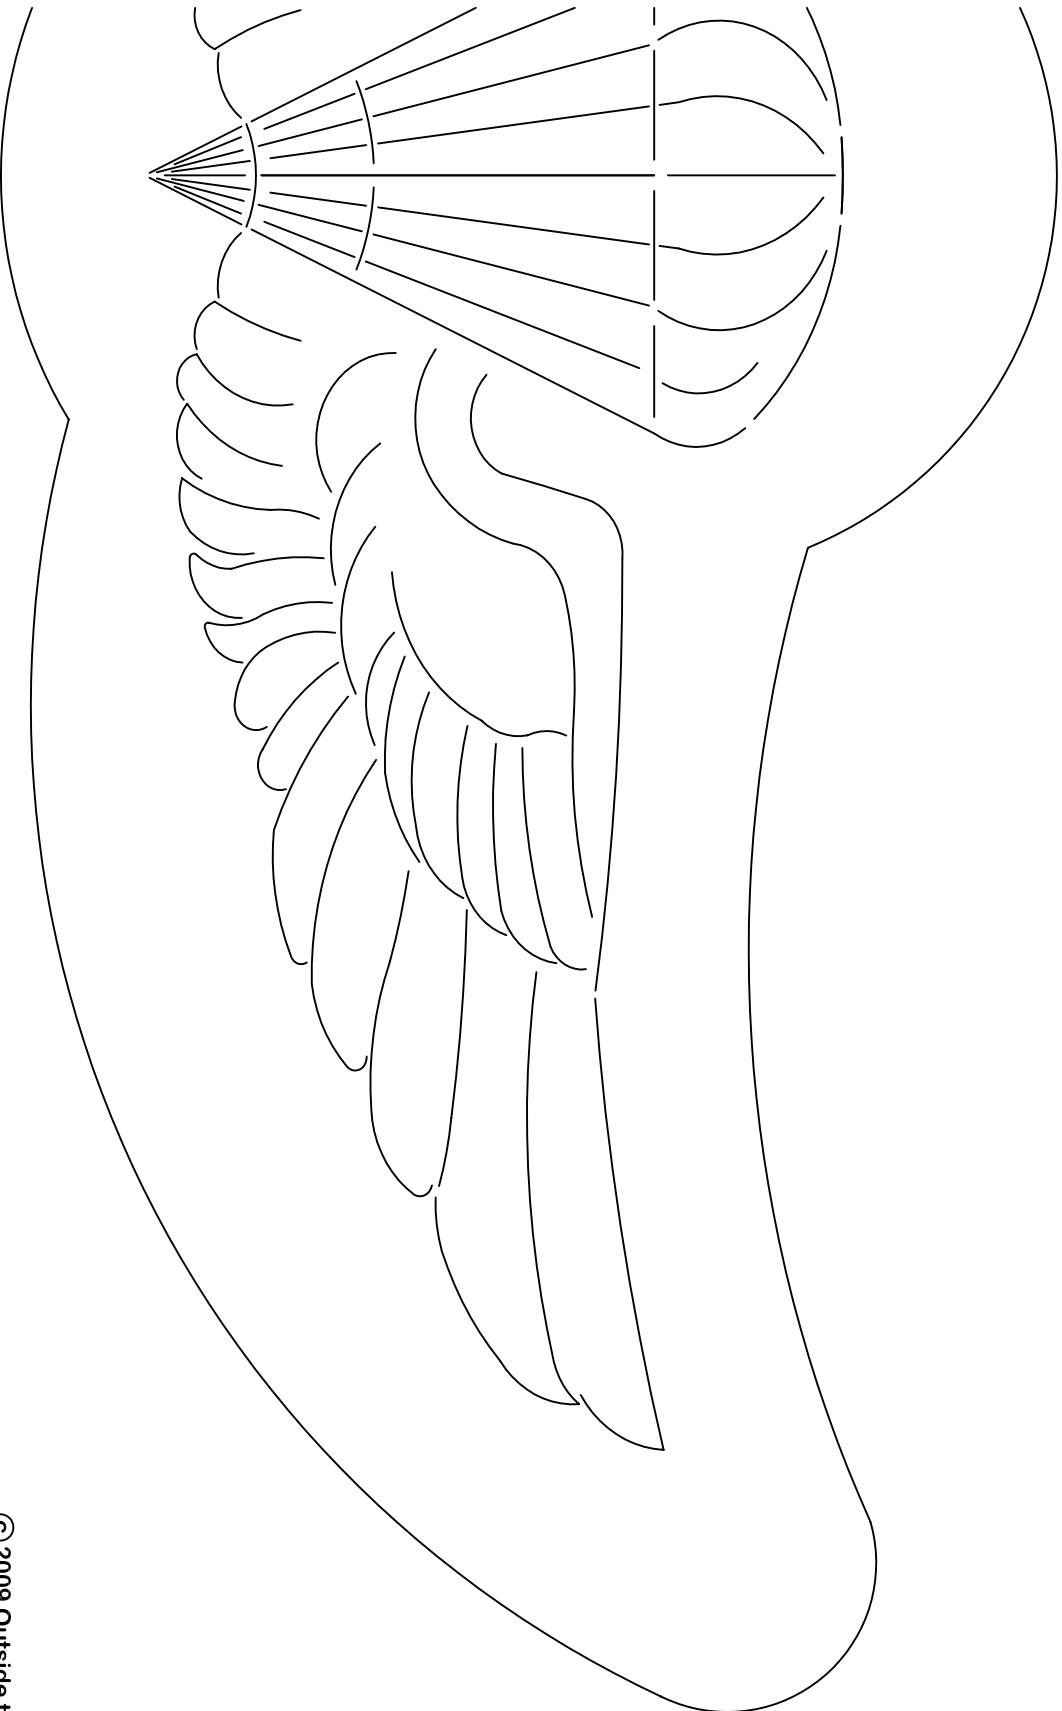

Match Line

Use pine, or Baltic birch plywood if painting. For added character, use western red cedar.

© 2009 Outside the Box Patterns
All Rights Reserved
Note to Professional Copy Services - The copyright owner grants you permission to make copies for the purchaser of this pattern who states the copies are for personal use.